

AudionET

DNA

Digital Network Amplifier

User's Manual

Contents

1	Preface	7
1.1	Included	8
1.2	Transport.....	8
2	Overview front panel	9
3	Overview back panel	10
4	Installation and power supply	11
4.1	Placement	11
4.2	Mains connection	11
4.3	Orientation of mains plug.....	12
5	Inputs and outputs	13
5.1	Audio inputs	13
5.1.1	Analog inputs.....	13
5.1.1.1	Optional phono input.....	13
5.1.2	Digital input.....	14
5.1.2.1	Audionet HighBit input.....	14
5.2	Audio output	15
5.2.1	Speaker terminals	15
5.2.2	Preamplifier output.....	15
5.2.3	Headphones Socket	16
5.3	Other connections.....	16
5.3.1	Network, USB, WLAN	16
5.3.2	USB Audio	16
5.3.3	FM Antenna Connection	17
5.3.4	Audionet Link.....	17
5.3.5	External power supply EPS G2 or EPX	18
5.3.6	Additional earth connection.....	19
5.3.7	Control connections.....	19
6	Usage	20
6.1	Basic operations	20
6.1.1	Powering up.....	20
6.1.2	Switching on and off	20
6.1.3	Mains phase detection	21

6.1.4	Using Audionet Link	22
6.1.5	Control elements on the front panel	22
6.2	Detail operations	23
6.2.1	Display.....	23
6.2.1.1	Analog input channel	23
6.2.1.2	Digital input channel	24
6.2.1.3	FM tuner.....	24
6.2.1.4	NET input.....	24
6.2.2	Volume control.....	26
6.2.3	Muting	26
6.2.4	Input selection	27
6.2.5	FM tuner	28
6.2.6	NET input.....	28
6.2.6.1	Internet radio	28
6.2.6.2	USB.....	29
6.2.6.3	UPnP server.....	29
6.2.7	USB Audio	29
7	Audionet Metal Remote Control RC 2.....	30
7.1	Key assignment RC 2	31
7.2	Changing the batteries	32
7.3	Settings for Audionet DNA	32
8	Device setup.....	34
8.1	Overview device menu	35
8.2	Select Input	37
8.3	Global setup	38
8.3.1	Headphones	38
8.3.2	Display.....	39
8.3.3	Balance Left/Right.....	40
8.3.4	Preamplifier output.....	41
8.3.5	Auto start	42
8.3.6	By-Pass channel	43
8.3.7	Phono Card	46
8.3.8	Power-off mode	47
8.3.9	Serial Port.....	48
8.4	Channel setup	49
8.4.1	Channel name	49
8.4.2	Volume offset.....	50
8.4.3	Digital Equalizer.....	50
8.4.4	Digital equalizer setup.....	51

8.4.5	Trigger out.....	52
8.4.6	ADC attenuation.....	53
8.4.7	DC Servo	54
8.5	Bass manager	55
8.5.1	Loudspeaker	55
8.5.2	X-Over.....	56
8.5.3	Subwoofer volume offset	57
8.5.4	Subwoofer phase	57
8.6	Delay manager	58
8.6.1	Speaker distance	58
8.6.2	Virtual subwoofer offset.....	59
8.7	Network setup	60
8.7.1	Manage Network	61
8.7.1.1	Restart Network Driver	61
8.7.1.2	Save & Apply Settings	62
8.7.1.3	Load Factory Defaults.....	62
8.7.2	Connection Type	63
8.7.3	DHCP	64
8.7.4	IP Address	65
8.7.5	IP Mask.....	65
8.7.6	Gateway.....	66
8.7.7	DNS	67
8.7.8	RCP port.....	67
8.7.9	Wireless setup.....	68
8.7.9.1	SSID	69
8.7.9.2	Wireless security	69
8.7.9.3	WPA pass phrase.....	70
8.7.9.4	WEP authentication.....	71
8.7.9.5	WEP key index.....	71
8.7.9.6	WEP key 0-3	72
8.7.10	Example for Network setup.....	73
8.8	Factory Default Reset.....	77
8.9	User settings	79
8.9.1	Save user setting	80
8.9.2	Load user setting.....	80
8.10	Device info	81
9	Security system.....	82
10	Additional information	83
10.1	Glossary	83

10.2	Link collection.....	85
10.2.1	Wireless security	85
10.3	Equalizer filter type.....	86
10.3.1	Peak-Filter	86
10.3.2	High shelf filter	86
10.3.3	Low shelf filter	86
10.3.4	High-pass filter 2 nd order	86
10.3.5	Low-pass filter 2 nd order.....	87
10.3.6	High-pass filter 1 st order.....	87
10.3.7	Low-pass filter 1 st order.....	87
10.4	Error handling (FAQ).....	88
10.5	Security advice.....	89
10.6	Factory defaults	90
10.7	Specifications	92

1 Preface

The Audionet Team congratulates you on your purchase of this unit.

Audionet components are no marketing products, they are authentic. Conceived and developed with scientific inspiration, professional engineering expertise and a passion for achieving the perfect sound. They are unique creations designed to inspire musical enjoyment and have an excellent reputation amongst all connoisseurs throughout the world. Each and every one of our precision-manufactured devices is individually crafted at our Berlin works by our experienced and passionate workforce.

But before you start listening to your new Audionet DNA, please read this manual carefully so you are able to use and enjoy all functions of this unit without drawback on music quality.

1.1 *Included*

Included you will find the following items:

- The stereo network amplifier DNA
- The user's manual
- one standard mains cord
- one green-yellow cord for an additional earth connection
- F-adaptor for FM connection
- WLAN antenna
- Audionet Metal Remote Control *RC 2*


1.2 *Transport*




Important

- Please transport the DNA only in the included package.
- Always use the provided bag to prevent scratches on the casing
- Please allow the DNA to adapt to the climatic conditions in your listening room before you switch on the unit for the first time after transport.

2 Overview front panel

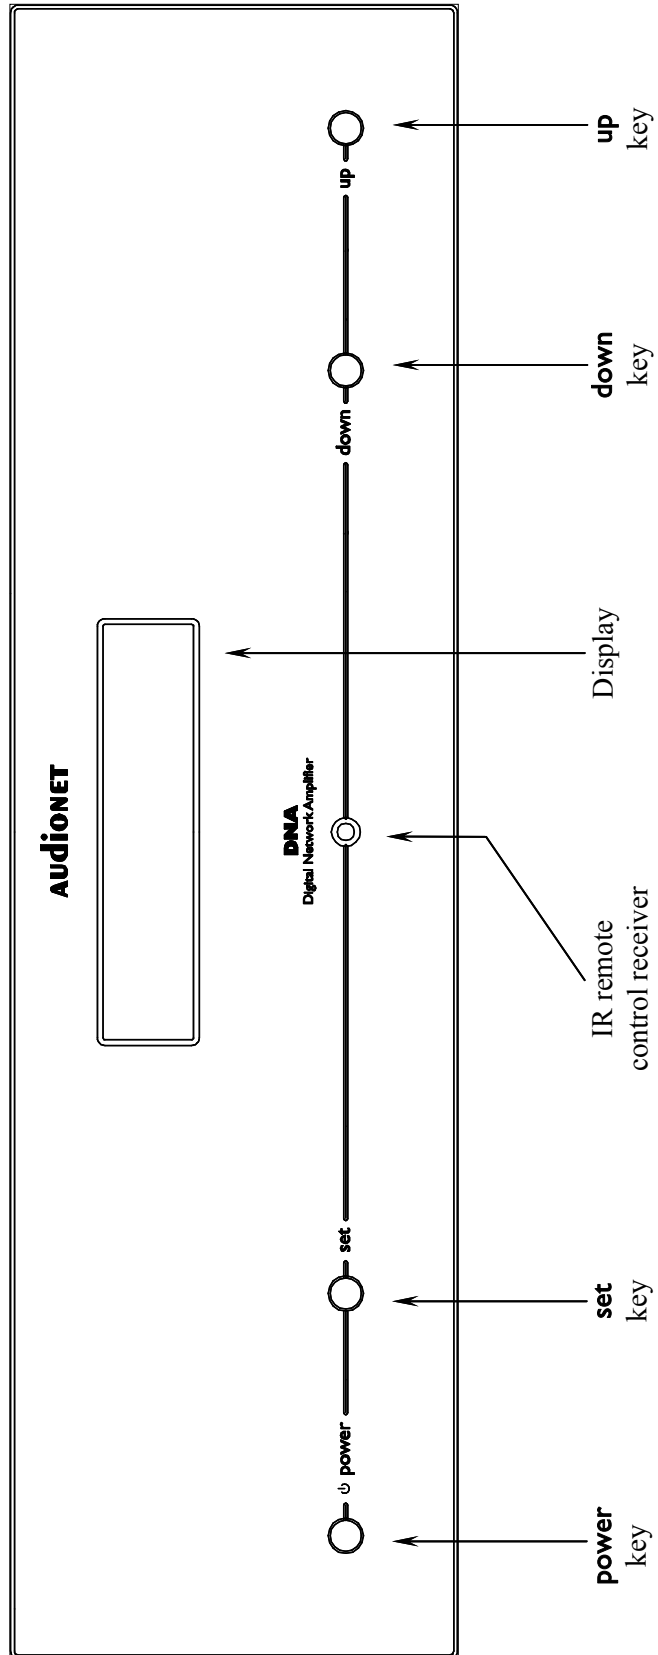

3 Overview back panel

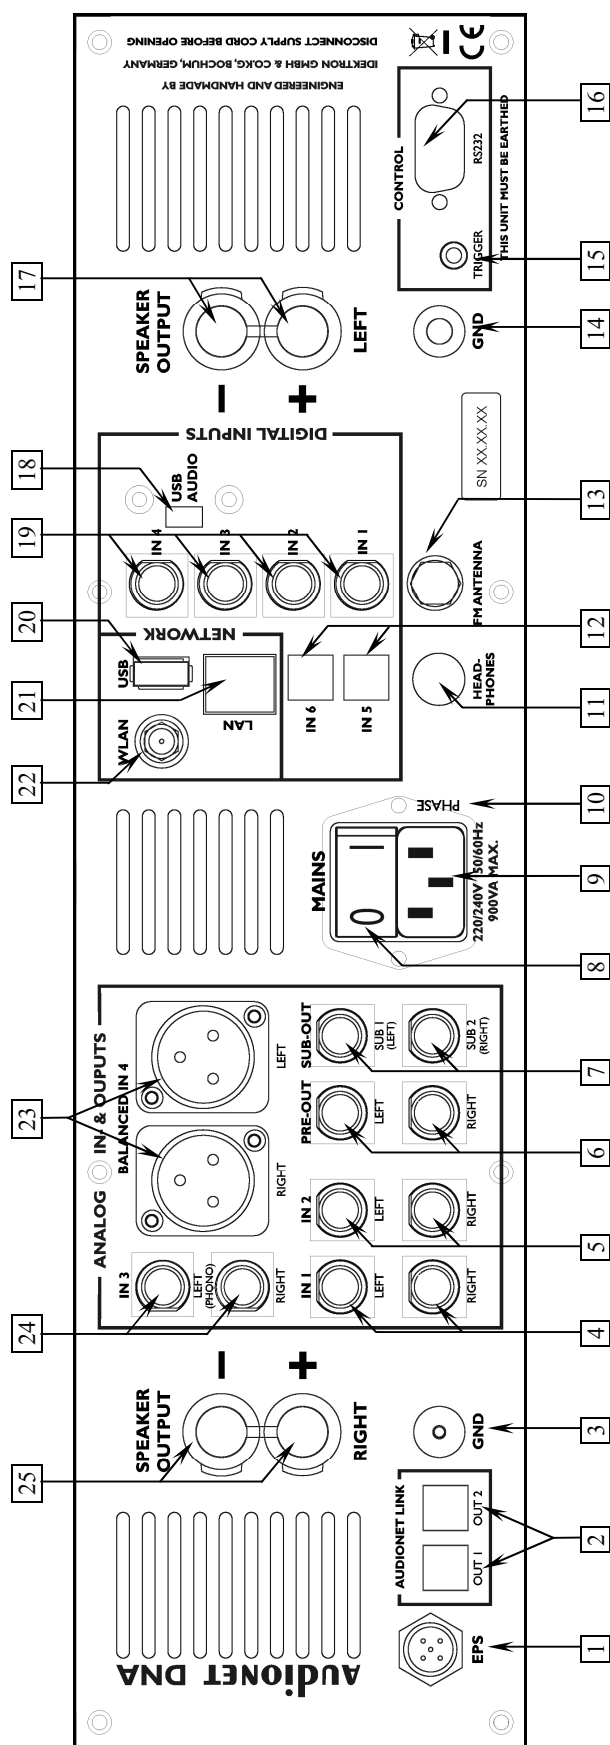

- | | | | | | |
|----------|---|-----------|-------------------------------------|-----------|---|
| 1 | 5-pin connector for external power supply EPS | 10 | Mains input | 18 | USB Audio Input |
| 2 | Audionet Link output OUT 1 , OUT 2 | 11 | Marking mains phase | 19 | Digital input no. 1, no. 2 no.3 and no. 4, electrical |
| 3 | Earth connector for turntable (phono) | 12 | Headphones output | 20 | USB connector |
| 4 | Cinch input no. 1, left/right | 13 | Digital input no. 5, no. 6, optical | 21 | Ethernet connector LAN |
| 5 | Cinch input no. 2, left/right | 14 | FM antenna input | 22 | Connector WLAN antenna |
| 6 | Preamplifier output PRE OUT , left/right | 15 | additional earth connector | 23 | Balanced input (XLR) no. 4, left/right |
| 7 | Subwoofer cinch output SUB OUT , SUB1/SUB2 or multiroom out left/right | 16 | Trigger output (5 or 12 Volt) | 24 | Cinch input no. 3, left/right (opt. phono) |
| 8 | Mains switch | 17 | Serial control port RS232 | 25 | Speaker output right |
| | | 18 | Speaker output left | | |

4 Installation and power supply



Important

- During connecting and removing of sources or amplifiers to the DNA all units of your audio system have to be switched off to prevent damage of the DNA or any of the other connected units.
- Please make sure that all cables are in absolute best conditions! Broken shields or short-cut cables could damage the DNA and/or any other connected unit.


4.1 Placement



Important

- It is recommended to place the DNA into a high quality rack or onto a stable table.
- Do not expose the unit to direct sunlight.
- Do not cover the ventilation slots.
- Do not place the DNA in close range to heat sources like radiators.
- Do not place the DNA on top of other units, especially not on top of power amplifiers, preamplifiers or similar devices that produce heat. Both units could suffer damage from thermal overload.
- Do not place other units on top of the DNA. Both units could suffer damage from thermal overload.
- Do not use the unit in places where it is exposed to vibrations.
- Do not place the unit close to loudspeakers or into the corner of a room where it is exposed to high levels of sonic energy, which might reduce the sound quality of the unit.

4.2 Mains connection

The mains input * is on the back panel of the DNA. To connect the device to mains use the included mains cord. If you prefer to use a different power cord make sure that it meets the specifications for your home country.

*see numbers in section "3 - Overview back panel" on page 10.



Important

- The electrical specifications of your home country must meet the electrical specifications printed onto the back panel.
- The DNA is a Class I unit and must be earthed. Please ensure a stable earth connection. Phase (hot pin) is marked on the back panel **phase** [10].
- If you connect the mains cord please make sure that the mains switch [8] on the back panel is switched off.
- Never pull the mains plug while the DNA is switched on! Before you pull the mains cord off its socket [9] on the back panel, power down the unit to stand-by mode using **power** key, and switch off the unit using mains switch [8].

Only in cases of extended absence – like vacations – or if massive trouble on the mains power grid is to be expected you should switch off the DNA from the mains using mains switch [8]. Then, to disconnect the unit completely from mains power grid, pull the mains plug.




Tip

- The use of high quality mains cords can improve sound quality. Ask your local dealer for more information.

4.3 Orientation of mains plug

The correct polarization of mains is important for reasons of audio clarity and stability. Please connect the mains cord so that the hot pin of the wall outlet is connected to the pin of the mains input [9] marked **phase** [10]. Your Audionet DNA is able to detect a wrong polarization of the mains plug during start-up. If the message

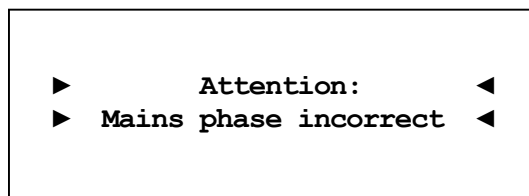

appears in the display, switch off the unit and flip the mains plug in the wall outlet (see section "*6.1.3 - Mains phase detection*" on page 21).

5 Inputs and outputs



Important

- During connecting and removing sources or amplifiers to the DNA all units of your audio system have to be switched off to prevent damage of the DNA or any of the other connected units.
- Please make sure that all cables are in absolute best conditions! Broken shields or short-cut cables could damage the DNA and/or any other connected unit.

5.1 Audio inputs

5.1.1 Analog inputs

The DNA is equipped with three unbalanced cinch inputs **IN 1** [4]*, **IN 2** [5], **IN 3** [24] and with a balanced input **IN 4** [23] for connecting signal sources at line level.

Please connect the left and right input of the same number printed on the back panel of the DNA to the corresponding output of the source you would like to connect to the DNA.

5.1.1.1 Optional phono input

The DNA can be upgraded with a phono preamplifier. Use input **IN 3** [24] to connect the turntable. Please connect the ground wire of the turntable to the terminal **GND** [3].



Important

- If the DNA is equipped with the optional phono module, input **IN 3** [24] must only be used to connect a turntable.
- Never use **IN 3** [24] as input for By-Pass mode, if the optional phono module is installed.
- If the DNA is equipped with the optional phono module, it has to be signed in to the system in order to be configurable. For further information see section "**8.3.7 - Phono Card**" on page 46.

*see number in section "**3 - Overview back panel**" on page 10.

5.1.2 Digital input

Connect your digital sources to the electrical (coaxial) digital input **IN 1** to **IN 4** ^[19] or to the optical (TosLink) digital input **IN 5** and **IN 6** ^[12].



Note

- Please make sure that your digital sources provide only uncompressed stereo PCM data to the digital inputs of your DNA. Possibly, other unsuitable formats (e.g. Dolby Digital or DTS data streams etc.) could cause noise.

5.1.2.1 Audionet HighBit input

In order to send audio data across the Audionet HighBit interface to your DNA, connect your source device (e.g. ART G3 or VIP G3) with **two** digital cords to the digital inputs **IN 1** and **IN 2**.

The following table shows how to connect Audionet HighBit-capable devices to the DNA:

Audionet HighBit			
Devices	Output		DNA Input
VIP G3	Digital OUT 1	→	Digital IN1
	Digital OUT 2	→	Digital IN2
ART G3	Digital OUT 1	→	Digital IN1
	Digital OUT 2	→	Digital IN2



Important

- Only if **both** connections are established and Audionet HighBit mode is activated on your source device, you can transmit audio data with all sampling rates and full resolution.



Note

- Check the corresponding section in user's manual for Audionet ART or VIP. User's manuals are available for download on our website www.audionet.de.

*see number in section "3 - Overview back panel" on page 10.

5.2 Audio output

5.2.1 Speaker terminals

Connect your speakers to the gold plated terminals **Speaker Output Left** [17] and **Speaker Output Right** [25] on the back panel of the DNA. You may use banana plugs or spades as well as simple cable ends. Please mind the correct connection of your speaker cables. Usually, the terminals of your speakers are marked + and -. The DNA uses the same markings.



Note

- Wrong speaker polarization will result in severe loss of sound quality.
- In case you would like to bi-wire your speakers please insert the cable to the tweeters from the rear using banana plugs and mount the cables to the bass speakers from the side. If in doubt, please ask your dealer for assistance.



Important

- Although the DNA has an effective protection system to prevent damage to the circuits, switch off the unit while working on the speakers and/or audio cables.
- The nominal loudspeaker impedance has to be at least 4 Ohms or higher.
- Never use force or tools tightening the terminal screws.

5.2.2 Preamplifier output

The DNA is equipped with two pairs of RCA preamplifier outputs **PRE OUT** [6] and **SUB OUT** [7] to connect e.g. an additional amplifier and one or two subwoofers. The **SUB OUT** [7] preamplifier output can be switched to multiroom output with separate volume control.

Use the RCA connection **PRE OUT** [6] with high quality cable (e.g. Audionet C100) for bi-amping. The **PRE OUT** [6] can also be switched to fixed volume for recording purpose.



Note

- Please refer to section *"8.3.4 - Preamplifier output"* on page 41 for detailed information on preamplifier output modes.

5.2.3 Headphones Socket

A 6.3 mm headphones socket **HEADPHONES** [11] is located at the rear of your DNA. The signal at this socket can be switched on and off to allow the headphones to be plugged in permanently. Switching is easily done in the system menu, please refer to "**8.3.1 - Headphones**" on page 38.

5.3 Other connections

5.3.1 Network, USB, WLAN

The Ethernet port **LAN** [21]* is a standard RJ45 socket for network cables (Cat-cable, 10/100 Mbit BASE-T).

The WLAN port **WLAN** [22] uses a SMA connection to attach the provided WLAN antenna. With the articulated joint, the antenna can be turned into two directions.

The USB port **USB** [20] is a TYPE-A socket (USB 2.0) for external hard drive, USB sticks etc.



Note

- We recommend using a wired network connection for best data transfer rate and to provide high stability in control with our software.

5.3.2 USB Audio

The USB Audio port **USB AUDIO** [18] is a mini-USB TYPE-B-socket. With the USB Audio connection, you are able to connect your DNA with a USB cable directly to a PC. Thus, you can use your DNA as the sound device / playback device for your PC. Playback operates in asynchronous mode, that means the DNA uses its own clock, and you are able to enjoy your music without diminishing sound quality.

For using USB Audio, the required driver needs to be installed on your PC. For Apple devices using Mac OS X 10.6.4 and higher a suitable driver is included within the operating system. To receive the driver for Windows based systems please contact us via service@audionet.de.

*see number in section "**3 - Overview back panel**" on page 10.



Note

- The driver is packed into a zip-file. To install the driver unpack the zip-file into a folder of your choice. Then open the chosen folder and start the installation process executing the file *setup.exe*.
- During the installation process, all occurring security warnings can be confirmed with 'OK'.
- During the installation process, your Audionet device has to be connected with your PC via an USB cable.
- After successful installation, you can choose your DNA as the sound device / playback device of your PC. For configuration, open the system preferences of your PC.
- Pay attention to the length of the USB cable. If the cable is too long, you might diminish sound quality and / or experience dropouts during playback.

5.3.3 FM Antenna Connection

Your device has an F-series connector **[13]** for antenna connection. An adaptor to coaxial socket is delivered separately. This port is specified for 75 Ohm FM antenna or analog cable TV connection.

5.3.4 Audionet Link

For your convenience, the DNA can switch on/off all other Audionet units (e.g. power amplifiers) connected via Audionet Link by a simple touch on the remote control or the **power** key on the front panel.

You only need a simple optical TosLink cable. Connect the Audionet Link output **Link OUT 2** of your DNA to the Audionet Link input of the unit to be controlled.

The DNA is equipped with two Audionet Link outputs **Link OUT 2**. **Link OUT 1** is always on while the DNA is switched on. However, Audionet Link output **Link OUT 2** is controlled depending on the settings for the headphones output. Please refer to section **"8.3.1 - Headphones"** on page 38.

Therefore, use Audionet Link output **Link OUT 2** in order to connect power amplifiers to the DNA via Audionet Link. Connect units you would like to control independently from the headphones settings (e.g. tuner, CD player, etc) to Audionet Link output **Link OUT 1**.



Tip

- Audionet source units and power amplifiers are usually equipped not only with an Audionet Link input, but also with an Audionet Link output to connect further Audionet devices to be controlled via Audionet Link in a daisy chain. Connect this Audionet Link output to the Audionet Link input of the next Audionet unit using a simple optical TosLink cable allowing you to switch on/off your complete Audionet system by your Audionet DNA.

5.3.5 External power supply EPS G2 or EPX

In order to use the optional external power supply Audionet EPS G2 or Audionet EPX connect it with the delivered cable to socket **EPS 1** on the back panel of your DNA. Connect **both (!!)** units (DNA and EPS G2 / EPX) to mains. First, switch on the DNA with the mains switch **8** on its back panel. Then switch on the EPS / EPX. Now the DNA is ready to use (stand by mode).

Switch on the DNA with the **power** key on the front panel or the key **DNx** on the Audionet Metal Remote Control *RC 2*. The Audionet EPS G2 / EPX will then be automatically switched on time-delayed.

To disconnect the DNA and EPS G2 / EPX from mains, switch the DNA into stand-by mode. Use the **power** key on the front panel or the key **DNx** on the Audionet Metal Remote Control *RC 2*. First, switch off the DNA with the mains switch **8** on the back panel, and then switch off the EPS G2 / EPX. Now you can disconnect the mains and EPS G2 / EPX connection cables.



Important

- **Never switch on or off the EPS G2 / EPX on its back panel while the DNA is operating!**
- **The DNA is only to be used with EPX or with EPS G2 from serial number 12.23.10 on up. For EPS or EPS G2 with older serial numbers there is no guarantee for proper functionality!**
- **Before using the DNA in combination with the external power supply EPS G2 or EPX please read the user's manual of the EPS G2 or EPX carefully!**

5.3.6 Additional earth connection

Attach the provided green-yellow cord to the earth connector **14** on the back panel of the DNA and put the plug into the mains socket right beside the mains cord of your DNA. This ensures an additional and stable earth connection resulting in a better sound.

Connect the ground wire from a turntable (phono) to the second ground connection **GND 3**.

5.3.7 Control connections


Use trigger output **TRIGGER 15** to control (e.g. switch on/off) non Audionet devices. If you switch on the DNA from stand-by mode, the trigger output **15** provides a signal of 12 Volts DC (see section "**8.4.5 - Trigger out**" on page 52), which can be re-configured to 5 Volts DC.

The serial connection **RS232 16** is an additional control port to your DNA e.g. for house automation systems (Crestron or similar). The documentation to the interface protocol is available on request. Please send us an email to address service@audionet.de.



Tip

- Use a 3.5 mm telephone mono plug to connect a device to the trigger output **15** of your DNA. The pinning is as follows:

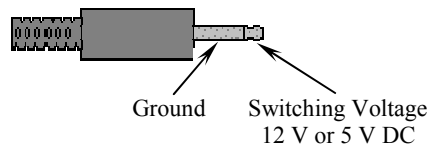


6 Usage



All functions of the DNA are microprocessor controlled. This guarantees highest precision, exclusive functions, easy handling and protection against operating errors.

6.1 Basic operations

6.1.1 Powering up

 First of all, please make sure your DNA is connected correctly to your signal sources, power amplifier(s) and mains (see section *"4 - Installation and power supply" on page 11* and *"5 - Inputs and outputs" on page 13*).

 The DNA is a stand-by unit. Please operate the mains switch  on the back panel. The display shows a welcome message for a brief moment. After that, the DNA is in stand-by mode.

Only in cases of extended absence (like vacations) or if massive trouble on the mains power is to be expected (e.g. thunderstorms) it is recommended to disconnect the DNA from the mains. While the DNA is in stand-by mode, operate mains switch  on the back panel. The display will go dark. To disconnect the DNA from mains completely, you have to pull the mains cord off the mains jack .




Important

- **Before you switch off the DNA from mains, power down and discharge completely all units connected to the outputs of the DNA.**

6.1.2 Switching on and off

To power up the DNA from stand-by mode, press the **power** key on the front panel. The DNA issues the message:

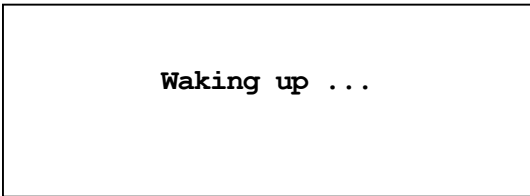

Waking up ...

In case the mains plug has the incorrect polarization a warning will appear in the display (see section *"4.3 Orientation of mains plug" on page 12*). After that, the unit is in normal operating mode and ready to use.

If you would like to switch off the unit, please press the **power** key on the front panel. The display shows the message



Going to sleep ...

and the unit enters stand-by mode.




Note

- Of course, you may switch on/off the DNA with the Audionet Metal Remote Control RC 2. For detailed information please refer to section *"7 - Audionet Metal Remote Control RC 2" on page 30*.

6.1.3 Mains phase detection

The correct polarization of mains is important for reasons of audio clarity and stability. Please connect the mains cord with the hot pin of the wall outlet to the pin marked **phase** [10] of the mains input [9] on the back panel. The DNA recognizes the incorrect polarization of the mains plug automatically. Right after switching on the unit from stand-by mode by pressing the **power** key on the front panel the following message will appear in the display in case the mains polarization is incorrect:

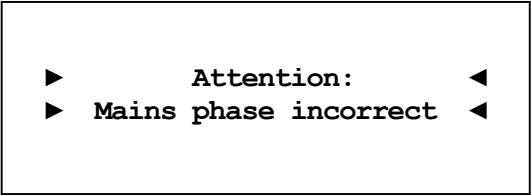

► **Attention:** ◀
► **Mains phase incorrect** ◀

If you got the above message, switch off the unit by pressing the **power** key. Please wait until the display no longer reads:



Going to sleep ...

Disconnect the DNA from mains by operating the mains switch [8]. Now pull the mains plug and re-insert it into the mains socket rotated by 180°.

If you switch on the unit again, the warning should not appear now.



Important

- If the DNA issues the mains polarization warning or no warning at all for both positions of the mains plug, check the connection to earth of your mains socket and mains cord. **You have to ensure a stable connection to earth for the mains phase detection of the DNA to work correctly!**

6.1.4 Using Audionet Link

Your DNA is equipped with two Audionet Link outputs **Link OUT 1** 2 and **Link OUT 2** 2 allowing you to switch on/off further Audionet units (e.g. power amplifiers, CD player or tuner) connected via Audionet Link (also see section *"5.3.4 - Audionet Link" on page 17*).

If the rest of your Audionet system is connected to your DNA via Audionet Link, all linked units will be automatically switched on/off as soon as you switch on/off your DNA using the **power** key on the front panel or the key **DNx** on the Audionet Metal Remote Control RC 2.



Note

- Audionet Link output **Link OUT 2** 2 switches on/off depending on the headphones settings (see section *"8.3.1 - Headphones" on page 38*).
- Please read section *"5.3.4 - Audionet Link" on page 17*. Also, consult the user's manual of your Audionet components connected via Audionet Link for further information.
- If you use Audionet Link to switch off other devices, please wait until everything is in stand-by mode before you switch on again.

6.1.5 Control elements on the front panel

The front panel has four keys to control the DNA (see section *"2 - Overview front panel" on page 9*). With these keys you are able to control all functions as well as all setup options to adjust the unit to your preferences (see section *"8 - Device setup" on page 34*).

power	Use key to switch on/off the unit (see section <i>"6.1.2 - Switching on and off" on page 20</i>).
set	<p>Push key for less than 2 seconds to change input channel (see section <i>"6.2.4 - Input selection" on page 27</i>). Within a menu, press set shortly to open a subfolder or to confirm and save an adjustment.</p> <p>Press the key for longer than two seconds to get into system menu (see section <i>"8 - Device setup" on page 34</i>). Within a menu, press and hold for longer than 2</p>

seconds to step back to the parent folder or to dismiss an adjustment without saving.

- down** Push key to reduce volume, select previous input channel (see section *"6.2.4 - Input selection" on page 27*) or change an option of the setup menu (see section *"8 - Device setup" on page 34*).
- up** Push key to increase volume, select next input channel (see section *"6.2.4 - Input selection" on page 27*) or change an option of the setup menu (see section *"8 - Device setup" on page 34*).


6.2 Detail operations

6.2.1 Display


The display provides the following information in the normal operating mode.

Depending on which input channel you chose, you get different information. If there is more information to show you can switch display pages with keys ◀ / ▶ on the Audionet Metal Remote Control RC 2 (see section *"7.1 - Key assignment " on page 31*). You will need it especially for the NET input channel (see section *"6.2.1.4 - NET input" on page 24*). The following illustrations demonstrate the differences between the input channels. Your display could look different, because of your selected system adjustments.


6.2.1.1 Analog input channel

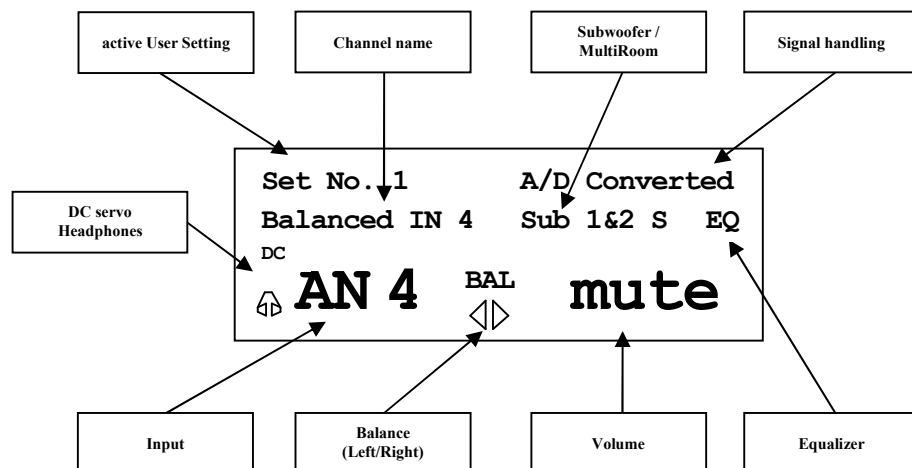

6.2.1.2 Digital input channel

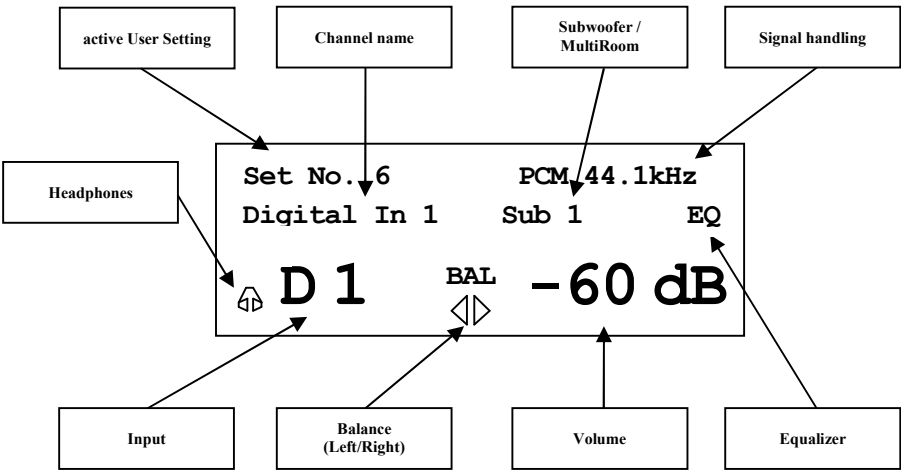


6.2.1.3 FM tuner

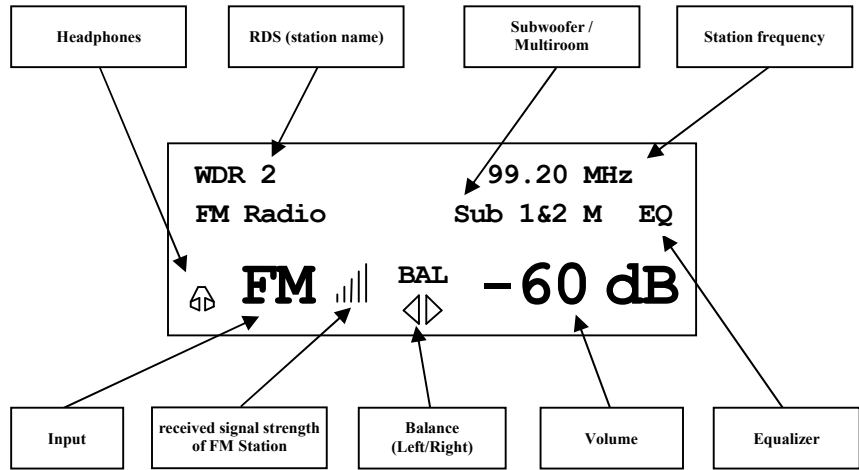


6.2.1.4 NET input


- View 1:

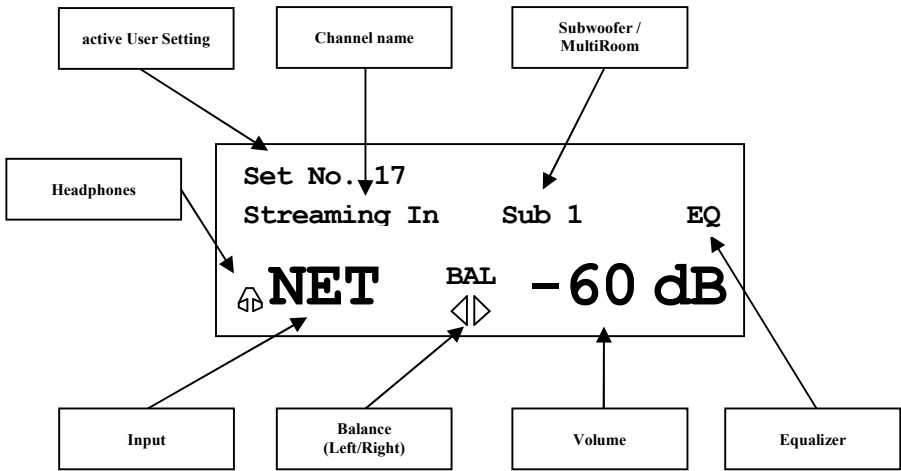


- View 2:

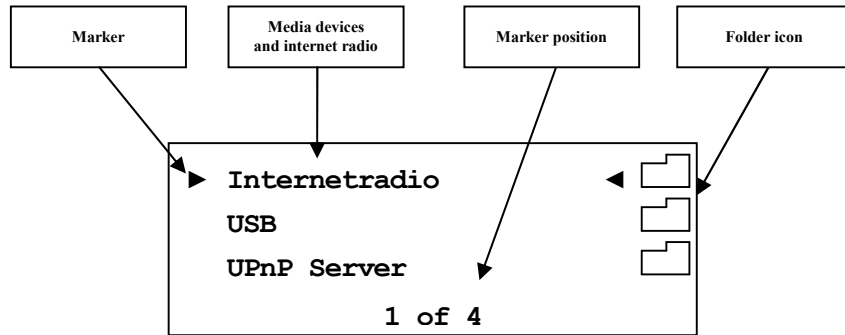

- View 3a (Play from UPnP or USB):

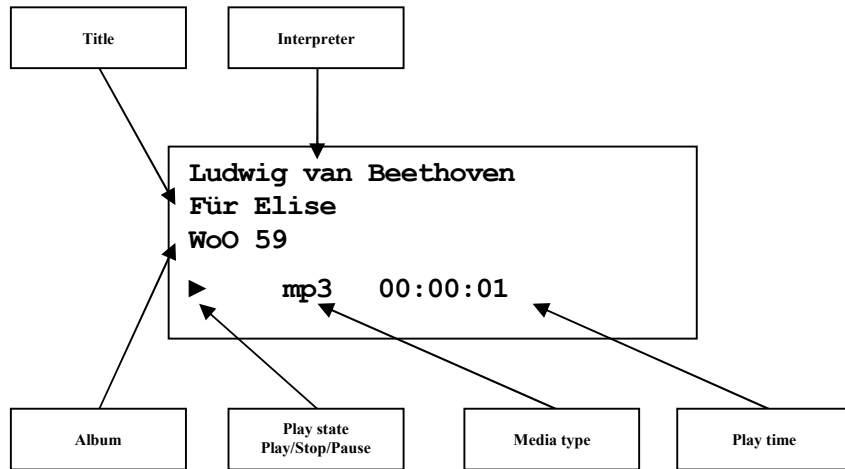

- View 3b (Play from internet radio station):

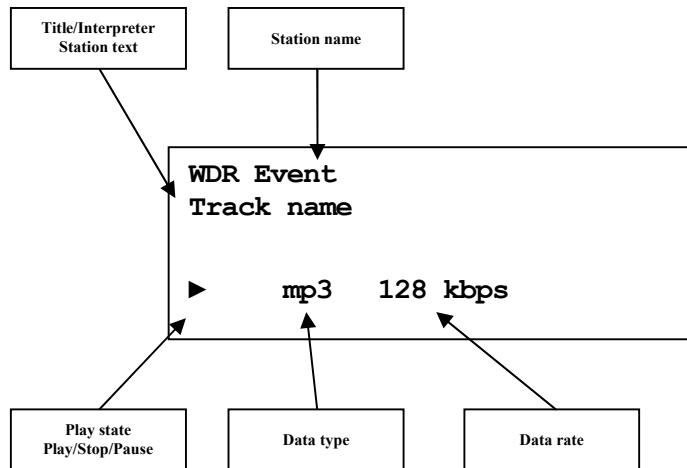

6.2.2 Volume control

While the DNA is in normal operating mode, use the keys **up** and **down** on the front panel to adjust the volume. **up** to increase, **down** to decrease the volume. The volume control of the DNA runs in a range from **-80 dB** (quiet) to **+10 dB** (very loud) in real 1 dB steps in relation to the level of the input signal. It is also possible to control the volume with your Audionet System Remote Control *RC 2* or the software Audionet RCP. Multiroom volume can only be set with the software Audionet RCP (see manual RCP and section "*8.5.1 - Loudspeaker*" on page 55).

6.2.3 Muting




Note

- The muting function is available with the Audionet Metal Remote Control *RC 2* (see section "*7.1 - Key assignment*" on page 31).
- You can also use the software Audionet RCP or the apps aMM or iMM to mute the DNA.


Press key  of the Audionet Metal Remote Control *RC 2* to mute or un-mute your DNA.

Just as well as the input selection, the DNA uses soft muting, i.e. volume is stepped down gently to -80 dB, and then the outputs are switched off. The display informs the user of a muted unit with the text **MUTE**. Even if the dim level is set to **Off**, the text is displayed.

To un-mute the DNA press key  again. Here as well, the volume is stepped up gently to its original level after switching on the outputs.



Note

- While the unit is muted, you may of course select a different input channel. However, the DNA will stay muted until you press the key  again to un-mute and restore the original volume level.
- If you turn up the volume by using the key **up** or **VOL+**, while the DNA is muted, the muting function will be deactivated, and the new volume level set.

6.2.4 Input selection

Push the **set** key on the front panel once for less than two seconds to enter the input selection menu. Then select the desired input channel with the keys **up** and **down**. In the display, you see the selected input channel, channel number and your chosen channel name. Press **set** again to actually switch to the selected channel. Overview of DNA input channels:

No.	Inputs	Signal	see 3 - Overview back panel on page 10
1	D1	Digital (electrical)	Digital Inputs IN 1 [19]
2	D2	Digital (electrical)	Digital Inputs IN 2 [19]
3	D3	Digital (electrical)	Digital Inputs IN 3 [19]
4	D4	Digital (electrical)	Digital Inputs IN 4 [19]
5	D5	Digital (optical)	Digital Inputs IN 5 [12]
6	D6	Digital (optical)	Digital Inputs IN 6 [12]
7	NET	Stream, USB, Internet radio	Network [20] [21] [22]
8	USB	USB Audio In	USB Audio [18]
9	FM	FM Tuner	FM Antenna [13]
10	AN1	Unbalanced Line	Analog Inputs IN 1 [4]
11	AN2	Unbalanced Line	Analog Inputs IN 2 [5]
12	AN3	Unbalanced Line / Phono	Analog Inputs IN 3 [24]
13	AN4	Balanced Line	Analog Inputs IN 4 [23]

The DNA features a soft input selection. During the switching of inputs, first the volume is stepped down to –80 dB, followed by switching off the outputs. Now the input section switches to the new input channel. Afterwards the outputs are switched on again, and finally the volume is stepped up to its original level.




Note

- Leave the input selection function by holding down the **set** key longer than 2 seconds or wait a few seconds.
- Using the Audionet Metal Remote Control *RC 2*, switch to the next or previous input channel without using the **Select Input** function with keys **CH+** and **CH-**.

6.2.5 FM tuner

For setting and saving radio stations to your DNA, please use the software Audionet RCP. You can also setup your radio station frequency manually with your Audionet Metal Remote Control *RC 2* (see section "*7 - Audionet Metal Remote Control RC 2*" on page 30). Use keys Page Up / Page Down to change frequency manually. Use keys ▲ / ▼ to reload the next / previous FM preset. Press keys ◀ / ▶ to start an automatic scan for the next / previous station.

6.2.6 NET input

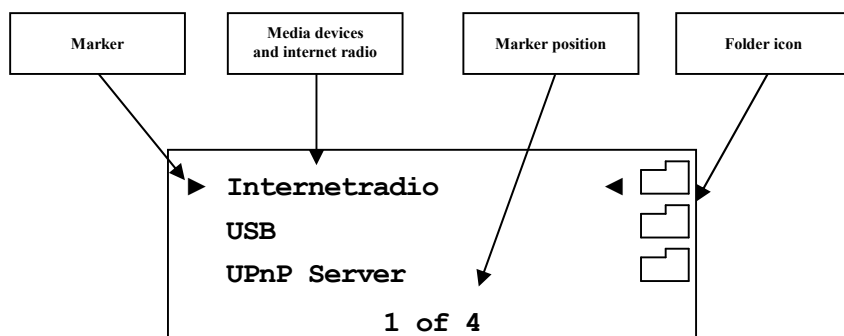

6.2.6.1 Internet radio

With the internet radio service *vTuner* it is possible to select your favourite radio stations from a steadily growing number of worldwide stations. You have to register with an account at *vTuner* to save your favourite stations and to receive personalized recommendations. Beforehand a stable network environment should be set up for your Audionet device (see section "*8.7 - Network setup*" on page 60).

To register an account, open the website <http://audionet.vtuner.com>. You will be going to visit this address every time you wish to edit your favourite radio stations. As long as you do not have registered an account with your Audionet device, you have to click on *Register Here* right below the login. Additionally you will be requested to enter your E-Mail address, to choose a personal passphrase and to enter an access code. There are two possibilities to find your access code. With the Audionet System Remote Control *RC 2* select the NET input. Select the first menu item **Internet Radio** using **OK** key. Navigate to menu entry **Get Access Code**. Confirm with **OK**. You will find your access code consisting of eight digits in line 3 (**3 of 3**). Write down this code and enter it in the registration window within your browser.



Important

- Once you obtained your access code using Audionet System Remote Control *RC 2*, write down the given code and put the remote control aside. Proceed with the registration process. Otherwise, every time

you will enter menu item **Get Access Code** a different code will be created for the MAC-address of your Audionet device.

The second possibility to receive the access code is to use the software Audionet RCP. With a stable connection established to your Audionet device, you might select NET input and open path "Home > Internet Radio > Get Access Code" within the UPnP tab. The code consists of eight digits and can be found in the third line.

As soon as you registered an account for your Audionet device, you are able to log in to the website <http://audionet.vtuner.com> and edit your favourite radio stations. Furthermore, you are able to add radio stations to your favourites by right-clicking on the station name within software Audionet RCP.

6.2.6.2 USB

Switch the DNA to the NET input channel. Now connect your USB device to the USB(-A) connector 20 and wait until it appears in the display. Supported are devices formatted FAT or FAT32 and that have only one partition. Your USB device appears on top of the list of audio servers/sources in the display. Navigate through the folder structure with the directional keys on your Audionet Metal Remote Control *RC 2* (see section "*7 - Audionet Metal Remote Control RC 2*" on page 30). Enter folders with the **OK** key, get one level back with the **↶** key. Alternatively, use function **Virtual Streaming Client** of RCP (see manual RCP).

6.2.6.3 UPnP server

The easiest way to play music from an UPnP server is to use the software Audionet RCP, the Android app aMM or the iOS app iMM.



Note

- Please have a look into separately available user's manual to our software Audionet RCP. You will find it on our website www.audionet.de.

If you want to use your Audionet Metal Remote Control *RC 2*, navigation through the folders works the same way as described above in section internet radio and USB.


6.2.7 USB Audio

The USB Audio connection allows a direct connection of your DNA to your PC. Play audio files with your favourite software. The DNA serves as sound device / playback device.

For further information see section "*5.3.2 - USB Audio*" on page 16.

7 Audionet Metal Remote Control RC 2

Access every function of the DNA via the included Audionet Metal Remote Control *RC 2*. The following sections explain in detail the keys and their corresponding functions.

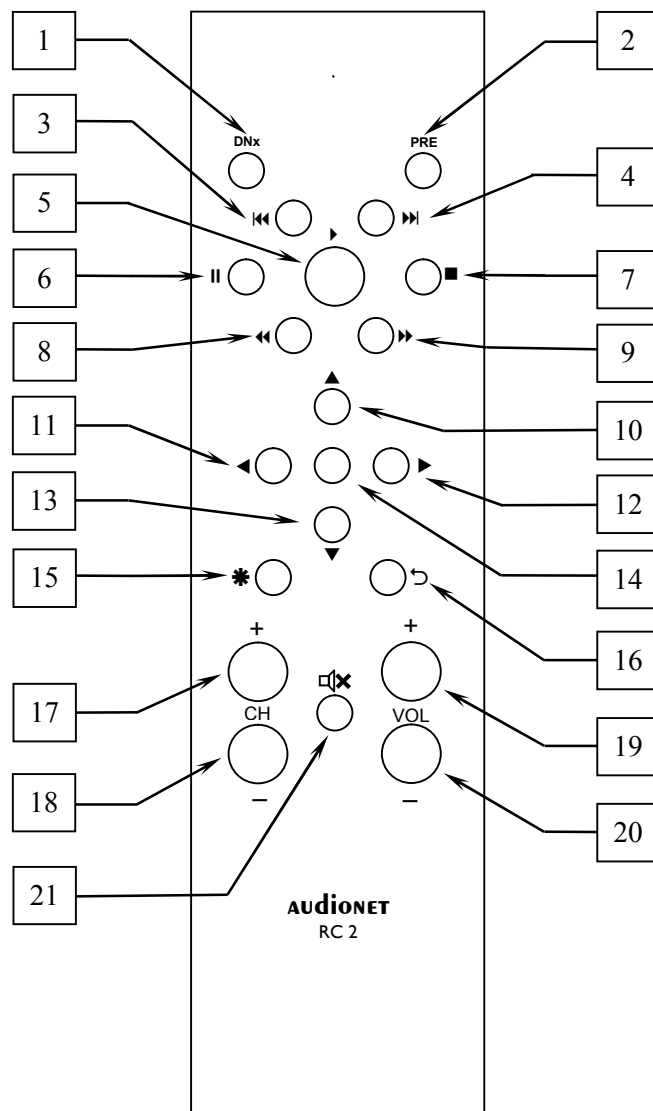


7.1 Key assignment RC 2

No.	Key	Function
1	DNx	power on / off the DNA
2	PRE	if configured for DNA, same function as key no. 1
3	⏮	skips back to start of running/previous title
4	⏭	skips to start of next title
5	▶	starts/resumes playback
6	⏸	pauses playback
7	■	stops playback
8	⏮	searches backwards
9	⏭	searches forwards
10	▲	for navigating through menus; moves cursor one step upwards
11	◀	for navigating through menus; moves cursor one step to the left or selects previous option
12	▶	for navigating through menus; moves cursor one step to the right or selects previous option
13	▼	for navigating through menus; moves cursor one step downwards
14	OK	acknowledge selection or enter menus/folders
15	*	enter main menu to setup your system
16	↶	cancel current setup option; get back to parent folder/menu
17	CH +	select next input channel of the DNA
18	CH -	select previous input channel of the DNA
19	VOL +	increase volume of the DNA
20	VOL -	decrease volume of the DNA
21	🔊	mute/un-mute the DNA


7.2 Changing the batteries

In order to exchange the batteries of your Audionet Metal Remote Control *RC 2*, first you have to remove the six Phillips head screws on the bottom side.

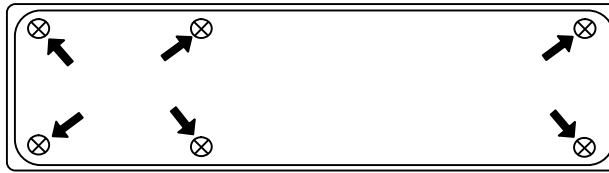

The battery compartment is to the left side of the circuit board. You need two batteries type 'AAA' or 'Micro' with a voltage of 1.5V.

Battery compartment

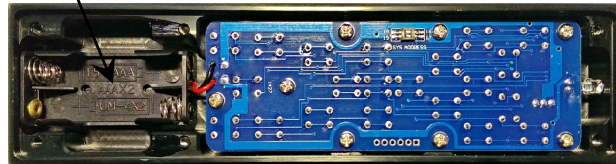

Important

- While inserting the batteries please mind their orientation. The correct orientation is printed onto the bottom of the battery compartment.

7.3 Settings for Audionet DNA




Important

- The Audionet Metal Remote Control *RC 2* is configured to control the DNA by factory default. You do not have to perform any additional configurations. For the sake of completeness, the following section explains the correct setup for the DNA.

Depending on their type, Audionet (pre-) amplifiers use different system addresses for their remote control code. A DIP switch on the circuit board of the Audionet Metal Remote Control *RC 2* selects the desired system address.

In order to set the system address you first have to open up the remote control (see section '*Changing the batteries*' on page 32).

For Audionet Metal Remote Control *RC 2* the DIP switch for selecting the system address is located here:

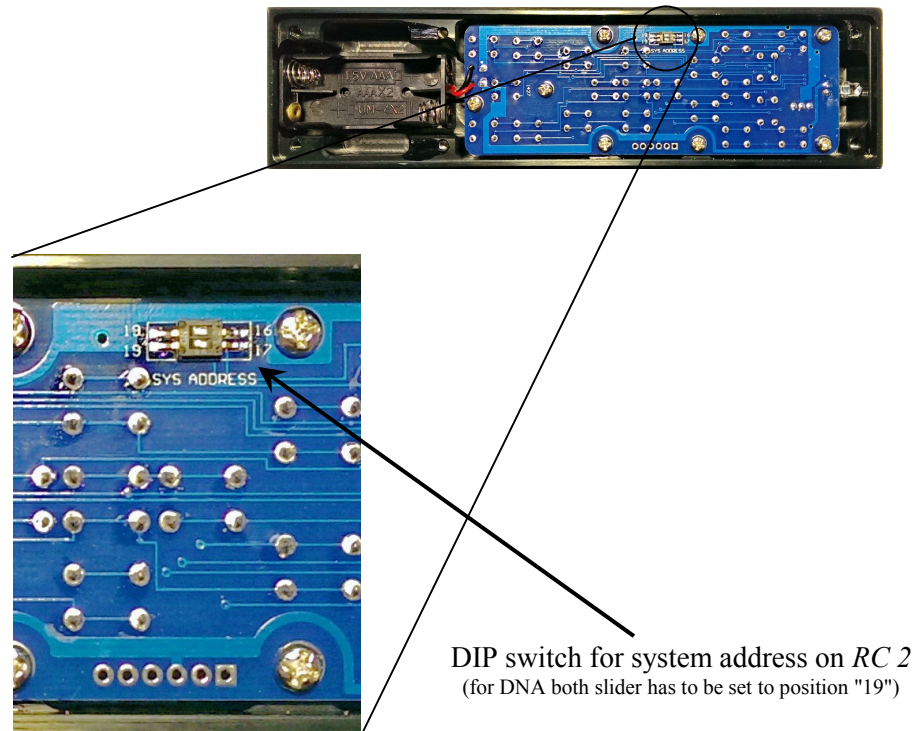

To configure the Audionet Metal Remote Control *RC 2* for controlling the DNA, put both sliders of the DIP switch labelled "SYS ADDRESS" in position "19".



Note

- By factory default, the Audionet Metal Remote Control *RC 2* is pre-configured to setting "19" of both sliders of the DIP.

8 Device setup

To adjust the DNA to your preferences, please use the setup menu. Navigate the menu with the keys on the front panel of your DNA or with your remote control. For a more comfortable adjustment, use our software Audionet RCP. You just need to integrate your DNA into your network (see section: "*8.7 - Network setup" on page 60*).

To control your DNA with front panel keys, use **set**, **up** and **down**.

set	push and hold the key for longer than 2 seconds to open the system menu. To cancel and leave the menu without saving, hold down the key for longer than 2 seconds again. A short keystroke saves / applies settings or opens menus / folder.
up, down	are used to change parameters or select menu items.

For easier control, use the directional keys on your Audionet Metal Remote Control *RC 2* (see section "*7 - Audionet Metal Remote Control RC 2" on page 30*).

The most comfortable way to setup your DNA is to use our software Audionet RCP. Use mouse and keyboard to adjust each parameter. Especially with equalizer setup, it is very useful, because the computer display provides all information at a glance (see also Audionet RCP user's manual).



Note

- Changes will only take effect if you push **OK** on your remote control or short push of **set** key on DNA front panel.
- Within menus with more than one page, the quickest way to reach the last item is to press **up**. E.g. to get to item **9 of 9**, open the main menu (marker is at **1 of 9**) and press **up** once instead of pressing **down** several times. Use the same procedure with keys **▲ / ▼** on the Audionet Metal Remote Control *RC 2*.

8.1 Overview device menu

Select Input	
Global Setup	Function
Headphones	Headphone mode
Display	Setup display brightness
Balance (Left/Right)	Setup volume balance left/right
Pre Out	Setup preamplifier mode
Auto start	Setup auto start mode
By-Pass Channel	Setup channel for By-Pass mode
Phono Card	Setup your phono card according to your phono pickup
Power-Off Mode	Setup stand-by mode
Serial Port	Setup serial port
Channel Setup	Setup every channel separately
Channel Name	Edit name of input channel (12 characters)
Volume Offset	Compensate differences in volume level between input channels
Digital EQ	Switch on/off digital Equalizer
Digital EQ Setup	Setup the parametric 5-band-equalizers (separately for each channel)
Trigger Out	Setup Trigger Out for control of non Audionet devices (e.g. active subwoofer)
ADC Attenuation	Setup attenuation, to prevent overload of the A/D converter
DC Servo	Switch on/off the DC servo
Bass Manager	
Loudspeaker	Main speaker setup
X-Over	Cross over frequency for high pass filter of main speakers and low pass filter for subwoofer
Sub Volume Offset	Compensate differences in volume level between subwoofer and main speaker volume

Sub Phase	Setup the subwoofer phase 0° or 180°
Delay Manager	
Speaker Distance	Setup distance between speakers and listening position
Virtual Sub Offset	Virtual setup of subwoofer position
Network Setup	
Manage Network	Manage main network setup
Connection Type	Select type of connection
DHCP	Switch on/off DHCP
IP Address	Setup IP address for your DNA
IP Mask	Setup subnet mask
Gateway	Setup gateway IP address
DNS	Setup DNS IP address
RCP Port	Setup network port for software Audionet RCP
Wireless Setup	Setup Wi-Fi (SSID, crypt,...)
Factory Default Reset	
Reset All Settings	Reset all settings (except Network Module)
Reset EQ Settings	Reset all EQ settings only
Reset User Settings	Reset all User Settings only
Reset Network Module	Reset Network Module
Reset FM Stations	Reset all FM station presets
Save User Setting	
Load User Setting	
Device Info	

8.2 Select Input

Push the **set** key on the front panel once for less than two seconds or push the key ***** on the Audionet Metal Remote Control *RC 2* to enter the **Select Input** menu item. Then select the desired input channel with the keys **up** and **down** or with the keys **◀ / ▶** on the remote control. In the display, you see the selected input channel, channel number and your chosen channel name. Press **set** or **OK** to actually switch to the selected channel.

Overview of DNA input channels:

No.	Inputs	Signal	see 3 - Overview back panel on page 10
1	D1	Digital (electrical)	Digital Inputs IN 1 19
2	D2	Digital (electrical)	Digital Inputs IN 2 19
3	D3	Digital (electrical)	Digital Inputs IN 3 19
4	D4	Digital (electrical)	Digital Inputs IN 4 19
5	D5	Digital (optical)	Digital Inputs IN 5 12
6	D6	Digital (optical)	Digital Inputs IN 6 12
7	NET	Stream, USB, Internet radio	Network 20 21 22
8	USB	USB Audio In	USB Audio 18
9	FM	FM Tuner	FM Antenna 13
10	AN1	Unbalanced Line	Analog Inputs IN 1 4
11	AN2	Unbalanced Line	Analog Inputs IN 2 5
12	AN3	Unbalanced Line / Phono	Analog Inputs IN 3 24
13	AN4	Balanced Line	Analog Inputs IN 4 23

While switching of inputs, the outputs are switched off at first. Once an input is selected, the outputs are switched on again.




Note

- Leave the input selection function by holding down the **set** key longer than 2 seconds or wait just a few seconds.
- Using the Audionet Metal Remote Control *RC 2*, switch to the next or previous input channel without using the **Select Input** function with keys **CH+** and **CH-**.

8.3 Global setup

8.3.1 Headphones

Select the desired setting.

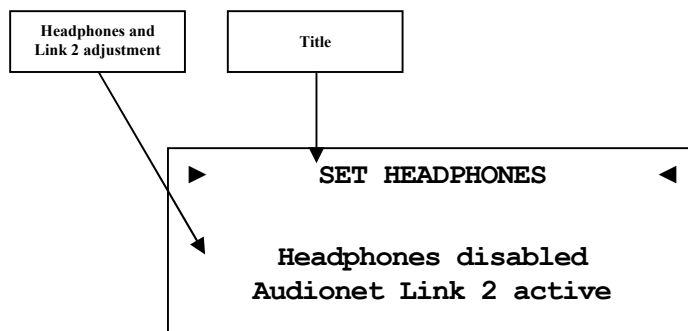

Headphones disabled
Audionet Link 2 ac-
tive

Headphones output **HEADPHONES** [11] is disabled. The Audionet Link output **Link OUT 2** [2] is switched on while the DNA is switched on.

Headphones active
Audionet Link 2 ac-
tive

Headphones output **HEADPHONES** [11] is active. The Audionet Link output **Link OUT 2** [2] is also active as long the unit is switched on. Use this option if you connect devices to the Audionet Link output **Link OUT 2** [2] that are supposed to be controlled via Audionet Link independently from the headphones setting.

Headphones active
Audionet Link 2 dis-
abled

Headphones output **HEADPHONES** [11] is active, but the Audionet Link output **Link OUT 2** [2] is **always** switched off. Use this option if you would like to switch off amplifiers, that are connected to the Audionet Link output **Link OUT 2** [2], automatically while you are using the headphones output.




Tip

- If you connect your power amplifier to the Audionet Link output **LINK OUT 2** [2] of the DNA, it will be switched off automatically as soon as you select the headphones option **Headphones active, Audionet Link 2 disabled**. Thus, you are able to enjoy music with your headphones and need not to worry about the amplifier. In case you deactivate the headphones output by selecting the option **Headphones disabled, Audionet Link 2 active**, the power amplifier is switched on automatically via Audionet Link, so you playback music through your speakers again.

8.3.2 Display

Adjust the display brightness with the front panel keys or your Audionet Metal Remote Control *RC 2*.

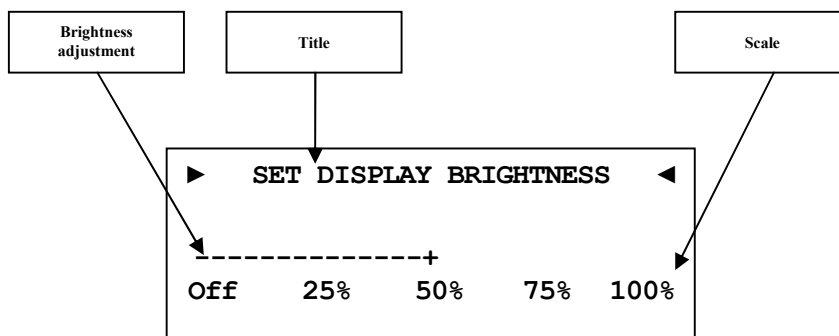

Note

- Get to this option at anytime opening the **Global Setup** and navigating to **Display**. Use directional keys ◀ / ▶ on the Audionet Metal Remote Control *RC 2* or **up** / **down** on the front panel to select desired brightness.
- It is also possible to set display brightness with the software Audionet RCP.
- Is the brightness set to **Off** the display is only on during setup or volume adjustments. It switches off automatically several seconds after the last user input.
- The DNA activates the display saver automatically 12 minutes after last user input/activity.
- During active display saver, the display shows only the number of the selected input channel and current volume level in the form of **An4 -47dB**. The display brightness is always reduced to 25%, and the location of the information text will change randomly every 12 seconds to prevent any burn-in effect of the display.
- The display saver is deactivated, and the display returns to its normal mode as soon as any user input is detected
- The user cannot switch off the automatic display saver function!




Important

- **Long-term usage of the display set to maximum brightness (setting 100%) may cause extended signs of wear resulting in a decay of contrast or brightness of individual dots in the display. Do not use the display with a brightness set higher than the factory default of 50% for a longer period of time!**

8.3.3 Balance Left/Right

Adjust the volume balance between left and right channel.

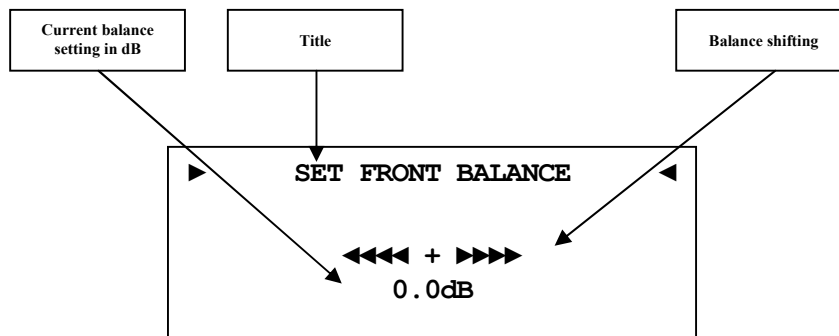

- 9dB** maximum volume displacement to left side
- 0dB** no volume displacement
- +9dB** maximum volume displacement to right side



Note

- In normal operating mode, the DNA indicates a balance shift by the corresponding icon in the lower middle of the display. Thus you are able to see whether the balance was shifted at any time (see section: **"6.2.1 - Display" on page 23**).
- A balance shift is carried out internally by attenuating the corresponding channel, i.e. if the balance is shifted to the right, the level of the left channel is attenuated and vice versa.




Tip

- For a more comfortable access, use the directional keys ◀ / ▶ on the Audionet Metal Remote Control RC 2 (see section **"7- Audionet Metal Remote Control RC 2" on page 30**). Acknowledge your selection with the **OK** key.

8.3.4 Preamplifier output

Adjust the preamplifier output mode for your local conditions.

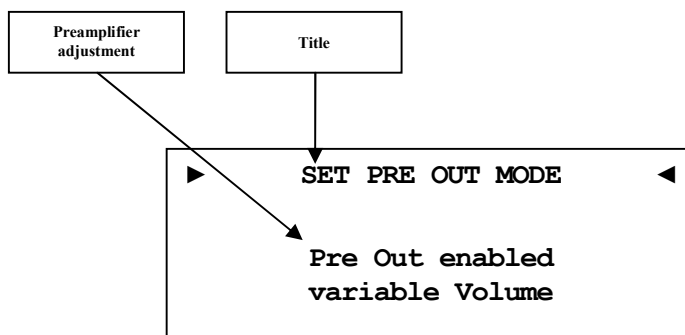

**Pre Out enabled
variable Volume**

Preamplifier output is connected to the volume control. Use this mode, if you want to connect a power amplifier

**Pre Out enabled
fixed Volume**

Preamplifier output is set to line level (record output). Use this mode to connect a recording device such as Tape e.g.

Pre Out disabled

Preamplifier output is switched off.



Important


- If you use **PRE OUT** [6] as record output, you have to connect the line output of your recording device (e.g. DAT, Tape,...) to analog **IN 2** [5]. The signal to this input is not routed to **PRE OUT** [6] in order to prevent internal feedback.



Tip

- For a more comfortable access, use the directional keys ◀ / ▶ on the Audionet Metal Remote Control RC 2 (see section "*7- Audionet Metal Remote Control RC 2" on page 30*"). Acknowledge your selection with the **OK** key.

8.3.5 Auto start

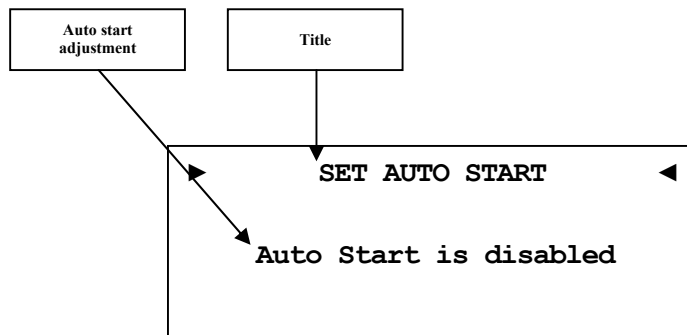

disabled The Auto Start function is disabled. After switching on the mains switch **8** on the back panel, the DNA enters the stand-by mode. You have to use the **power** key on the front panel or the key **DNx** on the Audionet Metal Remote Control *RC 2* to switch on the unit into normal operating mode.

active The Auto Start function is active. As soon as you connect the DNA to mains (i.e. use the mains switch **8** on the back panel) the unit starts up automatically to normal operating mode. Use this setting for timer controlled operations.




Tip

- For a more comfortable access, use the directional keys ◀ / ▶ on the Audionet Metal Remote Control *RC 2* (see section "*7- Audionet Metal Remote Control RC 2*" on page 30). Acknowledge your selection with the **OK** key.

8.3.6 By-Pass channel

Select the analog input channel you want to use for By-Pass mode.

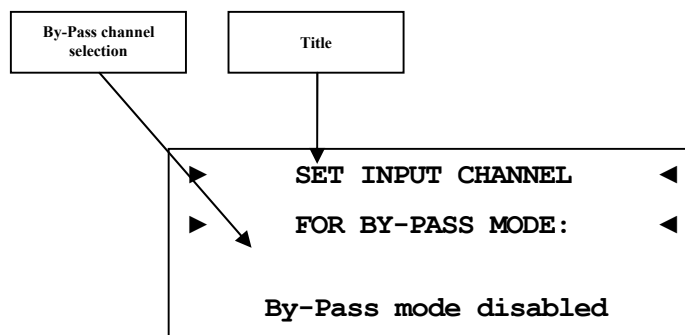

Important

- Before you are able to use the By-Pass Mode, you have to select the analog input channel that is used for the By-Pass Mode.
- For safety reasons the factory default settings have **no** input channel selected for By-Pass Mode (display: **By-Pass mode disabled**).

The By-Pass Mode was primarily intended to integrate the overwhelming sound quality of the DNA into an existing home cinema setup or to expand an existing excellent stereophonic system based on the DNA to a complete home cinema setup without missing out on the qualities of the DNA. To realize this kind of setup, please proceed as follows:

1. Connect your home cinema preamplifier according to its user's manual.
2. Connect the output for the front channels Left and Right not to the power amplifier but to one of the free analog inputs of the DNA (except analog input **IN 3** [24]).
3. Use menu item **By-Pass channel** of the setup menu of the DNA to select the input channel for By-Pass Mode you connected the outputs Left and Right of the home cinema preamplifier to.
4. Connect now all high quality 2-channel sources to the remaining inputs of the DNA.
5. Connect your DVD player to your home cinema preamplifier as usual.

Use the DNA to listen to high quality 2-channel sources and streaming audio. If you would like to use your home cinema system, activate the By-Pass Mode of the DNA and use your home cinema preamplifier as usual.



Important

- Please read the complete section about the special function **By-Pass Mode** first before you use this function in order to prevent incorrect usage and possible damage to your audio system and/or hearing.
- By factory default no input channel is selected for the **By-Pass Mode**. Use this menu option to select desired input channel for the **By-Pass Mode**.

When the By-Pass Mode is active, the volume control of the DNA is bypassed. The DNA passes through the input signal to the outputs and amplifiers with its **full** level.

Please use this setup option to select which of the four analog input channels of the DNA is fed through to the amplifiers and outputs if By-Pass Mode is active.



Important

- **First**, select the input channel used for **By-Pass Mode**, before you activate the **By-Pass Mode** for the first time.

The special function By-Pass Mode of your DNA is activated automatically if you switch to the input channel selected for By-Pass Mode in the setup option "**Set input channel for By-Pass Mode**". The signal at the input channel selected for By-Pass Mode operations is passed through the DNA at a level of 0 dB (i.e. no change in volume level) to the outputs and amplifiers.

As soon as you select a different input channel, the special function By-Pass Mode is switched off automatically.



Important

- Please check the correct connection and setup before you use the **By-Pass Mode** for the first time. The input signal will be passed through to the outputs at full level!

As soon as the By-Pass Mode is activated, the DNA will ignore all control commands coming from the keys on the front panel or remote control (exceptions see below)!



Important

There are only two possibilities to disable the By-Pass Mode:

1. Select a different input channel. The DNA switches to the newly selected input channel, resetting the volume to its prior level.

2. Push the **power** key on the front panel or the button **PRE** on the Audionet Metal Remote Control *RC 2*. The DNA switches off to stand-by mode.



Note

- If you leave the By-Pass Mode by pushing the **power** key on the front panel or the key **DNx** on the Audionet Metal Remote Control *RC 2*, this mode will be saved, i.e. if you switch on the DNA again, the unit will switch to the last saved input channel selection and thus into the By-Pass Mode.
- The analog input **IN 3** 24 ("Phono Input") is not available for selection of the By-Pass Mode.




Tip

- For a more comfortable access, use the directional keys ◀ / ▶ on the Audionet Metal Remote Control *RC 2* (see section "*7- Audionet Metal Remote Control RC 2*" on page 30). Acknowledge your selection with the **OK** key.

8.3.7 Phono Card

Adjust your phono card.

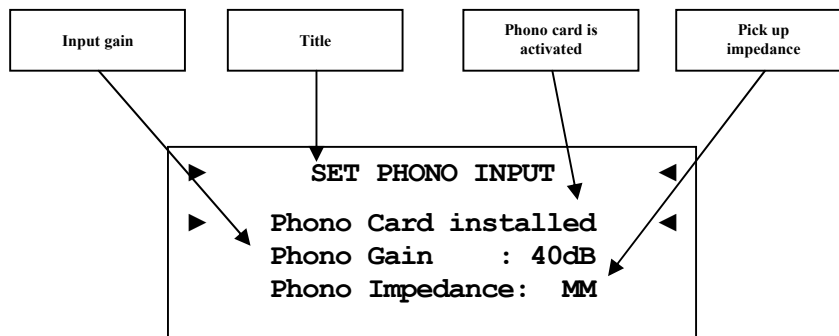

Phono Card missing

If your DNA is **not** equipped with the optional phono card, please choose this option.

Phono Card installed
Phono Gain : 40-70dB
Phono Impedance: MM/MC

If the optional phono card is installed, please select this option to register the phono card to the system and proceed with additional configurations.

Setup input gain and impedance corresponding to your turntable pick up.



Note


- Check out technical information about your turntable and pick up system. Otherwise, ask your local dealer for support.



Tip

- For a more comfortable access, use the directional keys on the Audionet Metal Remote Control *RC 2* (see section *"7- Audionet Metal Remote Control RC 2" on page 30*). Acknowledge your selection with the **OK** key.

8.3.8 Power-off mode

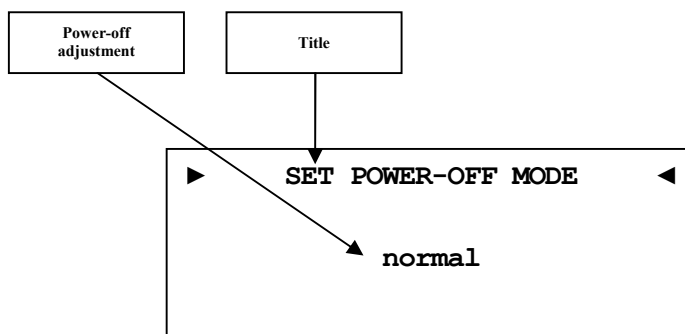

There are two different power-off modes available for the DNA. Firstly the **normal** power-off mode and secondly the **Quick Start** mode.

The factory default setup is the **normal** mode, because of low power consumption in stand-by (less than 1W). If you use normal power mode, you cannot switch on with the software Audionet RCP.


With the **Quick Start** mode selected, the network interface remains active, and the DNA start up process is accelerated, because the network interface does not need to boot up. Furthermore, you can use software Audionet RCP to power on. If you select **Quick Start** mode the power consumption is increased. For further details please see section *"10.7 - Specifications"* on page 92.



Tip

- For a more comfortable access, use the directional keys ◀ / ▶ on the Audionet Metal Remote Control *RC 2* (see section *"7- Audionet Metal Remote Control RC 2"* on page 30). Acknowledge your selection with the **OK** key.

8.3.9 Serial Port

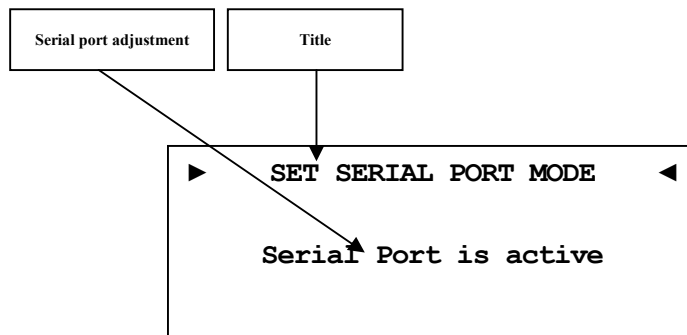

disabled The serial port is disabled. In this state you are not able to control the DNA via the serial port (e.g. by a home automation system). Select this setting, if you do not want to control the DNA via the serial port.

active The serial port is active. Control your DNA via the serial port (e.g. by a home automation system).



Important

- If the you like to use the serial port **RS232** 16 for controlling the DNA, you **have** to enable the serial port (**active**).
- While the serial port is configured active, the power consumption of the DNA in stand-by mode will be higher even if the power-off mode **normal** is selected.
- Disable the serial port if you do not wish to control the DNA via this interface (e.g. by a home automation system).




Tip

- For a more comfortable access, use the directional keys ◀ / ▶ on the Audionet Metal Remote Control *RC 2* (see section *"7- Audionet Metal Remote Control RC 2" on page 30*). Acknowledge your selection with the **OK** key.

8.4 Channel setup

All settings in menu item **Channel Setup** apply to the currently selected input channel.

8.4.1 Channel name

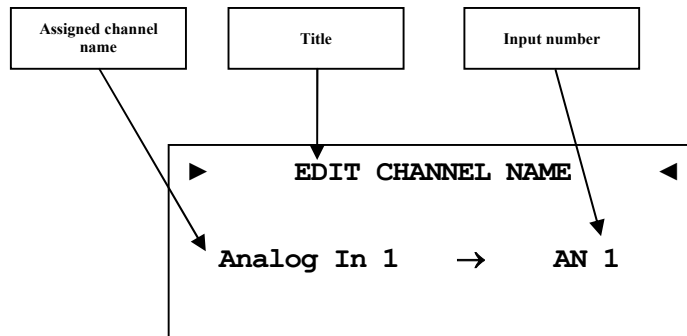

You can assign a fully user-definable name up to 12 characters in length to each of the thirteen input channels. The display shows the number of the currently selected input channel and the assigned channel name. The cursor marks the character you now may alter.


Use keys **up** / **down** on the front panel or keys **▲** / **▼** of the Audionet Metal Remote Control *RC 2* to alter the character marked by the cursor. Press and hold **set** for longer than 2 seconds or press key **►** to move the cursor one position to the right. Key **◄** moves the cursor one position to the left. To finish editing the channel name press **set** or **OK**.



Note

- For easier adjustment of the channel name use the software Audionet RCP (see user's manual RCP).
- All settings apply to the currently selected input channel.

8.4.2 Volume offset

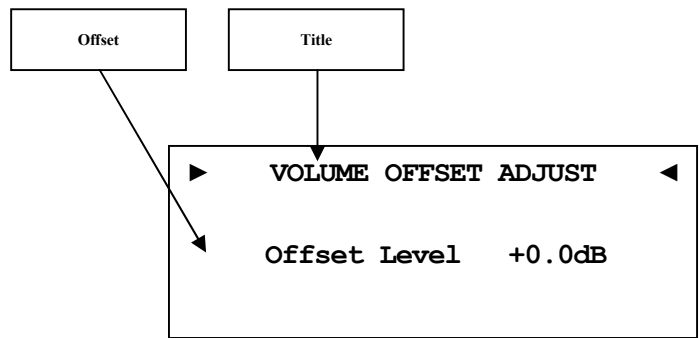


To offset differences between input devices, you can adjust the volume level for each channel in range from -9dB to +9dB.



Tip

- For a more comfortable access, use the directional keys ◀ / ▶ on the Audionet Metal Remote Control *RC 2* (see section *"7- Audionet Metal Remote Control RC 2" on page 30*). Acknowledge your selection with the **OK** key.

8.4.3 Digital Equalizer

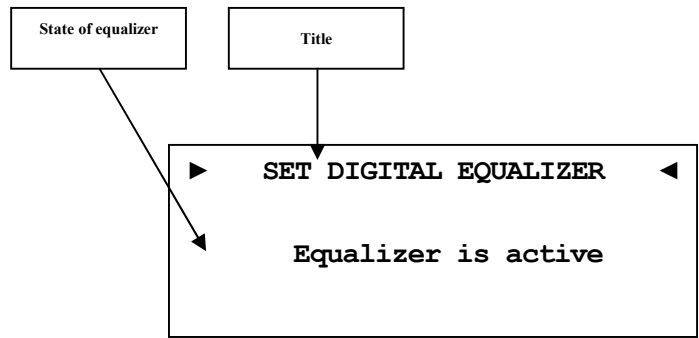

disabled The digital equalizer is disabled.

active The digital equalizer is active and all the settings from menu item **Digital EQ Setup** are applied to the currently selected input channel.




Tip

- For a more comfortable access, use the directional keys ◀ / ▶ on the Audionet Metal Remote Control *RC 2* (see section *"7- Audionet*

Metal Remote Control RC 2" on page 30). Acknowledge your selection with the **OK** key.


8.4.4 Digital equalizer setup

The digital EQ is a parametric 5-band equalizer with separated adjustment for left and right channel, as well as subwoofer 1 and 2.

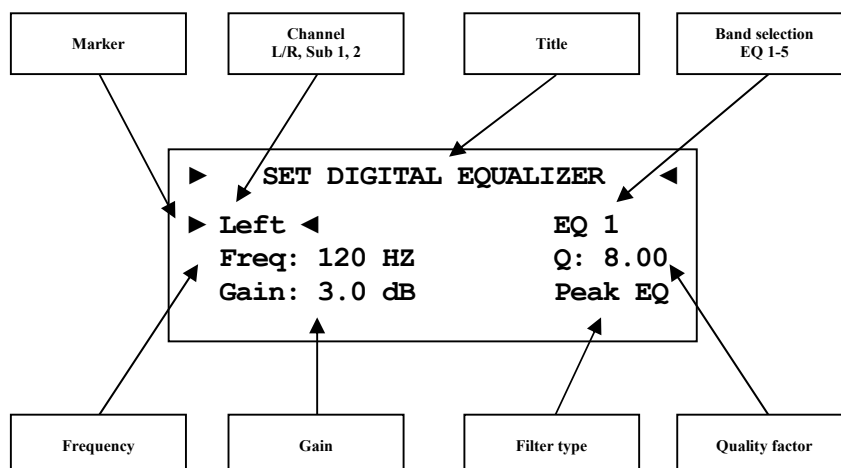

Navigate through the menu of the digital EQ with the directional keys **◀ / ▶ / ▲ / ▼** on your Audionet Metal Remote control *RC 2*. Keys **▲ / ▼** select the parameter you like to adjust. Keys **◀ / ▶** change the selected parameter. If you enter the digital equalizer menu item, the first selected parameter is the speaker channel. Here you select the speaker channel you want to adjust: [**Left**, **Right**, **Subwoofer 1**, **Subwoofer 2**].

The availability of the subwoofer(s) depends on the speaker setup in menu item **Bass Manager** (see section: "**8.5.1 - Loudspeaker**" on page 55).

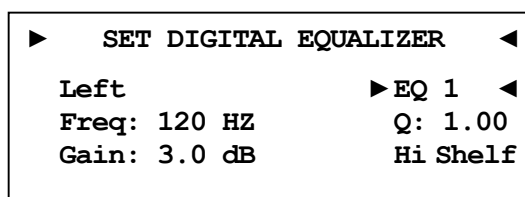

The next parameter to adjust is the EQ band [**EQ 1 - EQ 5**]. For each band you can adjust the following parameter:

- Freq** center- respectively cutoff frequency (depends on filter)
- Q** filter quality (depends on filter)
- Gain** gain (from -12 dB to +6 dB)
- Filter type** you can choose between seven different filter types


Filter type	Short description
Peak EQ	Band-pass filter
Hi Shelf	Treble control
Lo Shelf	Bass control
LP 2nd	Low-pass filter 2 nd order
HP 2nd	High-pass filter 2 nd order
LP 1st	Low-pass filter 1 st order
HP 1st	High-pass filter 1 st order



Note

- For easier adjustment of equalizer parameters use the software Audionet RCP (see user's manual RCP).
- All settings apply to the currently selected input channel.
- If you configure the EQ for any analog input channel, the audio signal runs through the internal analog-to-digital convertor. In normal operation mode the display provides the information whether the signal is converted from analog to digital (= **A/D Converted**) or if it stays in the analog domain (= **Pure Analog**).
- Also see section "*8.4.6 - ADC attenuation*" on page 53.

8.4.5 Trigger out

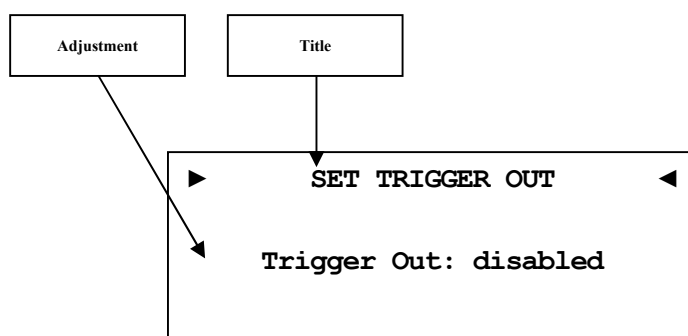

Use trigger output **TRIGGER** [5] to control (e.g. switch on/off) non Audionet devices. If you switch on the DNA from stand-by mode, the trigger output [5] provides a signal of 12 Volts DC.

The voltage of the trigger output can be re-configured to 5 Volts DC. Changing the voltage must be done by authorized personnel only. Please ask your local dealer for support.



Note


- All settings apply to the currently selected input channel.



Tip

- For a more comfortable access, use the directional keys ◀ / ▶ on the Audionet Metal Remote Control *RC 2* (see section "*7- Audionet Metal Remote Control RC 2*" on page 30). Acknowledge your selection with the **OK** key.

8.4.6 ADC attenuation

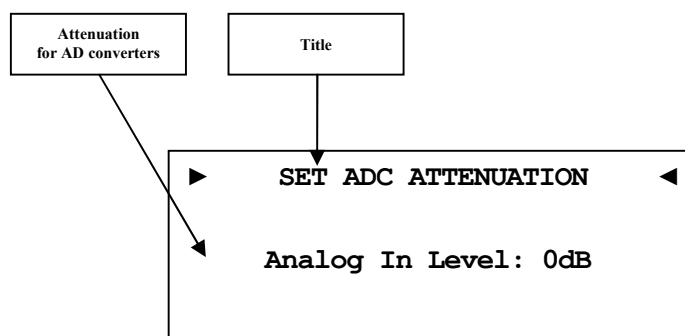

- | | |
|--------------|---|
| 0 dB | The analog audio signal is sampled by the analog-to-digital convertor without any change in level. |
| -6 dB | If the analog audio input level is too high and distortions appear, apply the attenuation of 6dB attenuation. The input level is reduced by 6dB prior to the analog-to-digital convertor to prevent distortion. |

Pure Analog or **A/D Converted** is displayed in the upper right corner on the front panel display.

Pure Analog stands for direct signal path through the DNA. The only manipulation to the signal is the volume control.


A/D Converted is displayed if the analog audio signal is sampled for digital manipulation. All equalizing and bass management is done in the digital domain.



Tip

- For a more comfortable access, use the directional keys ◀ / ▶ on the Audionet Metal Remote Control RC 2 (see section *"7- Audionet Metal Remote Control RC 2" on page 30*). Acknowledge your selection with the **OK** key.

8.4.7 DC Servo

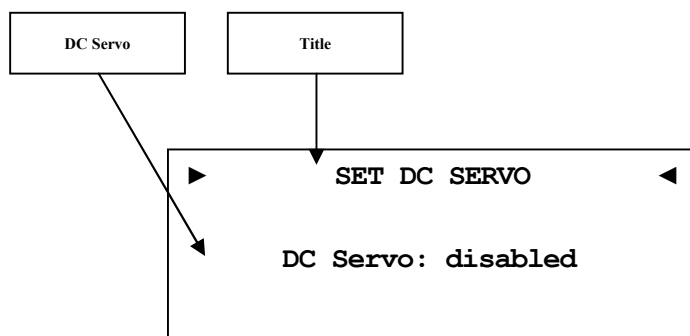

disabled The DC Servo is disabled for the currently selected input channel.

active The DC Servo is activated for the currently selected input channel.

Activate the DC Servo only in cases if the analog source connected to the DNA holds a high DC component in its output signal. The DC Servo eliminates the DC component. The currently selected input channel is now AC-coupled. Usually the DC Servo may be disabled. This adjustment is only available for analog input channel.



Note

- In normal operating mode the display indicates an active DC Servo for the currently selected input channel by a small **DC** symbol next to the input channel (see *"6.2.1.1 - Analog input channel" on page 23*).
- It is recommended to switch on the DC Servo only in cases where the analog input signal actually carries a DC component. Otherwise, it will diminish the audio signal quality of the DNA.




Tip

- For a more comfortable access, use the directional keys ◀ / ▶ on the Audionet Metal Remote Control RC 2 (see section *"7- Audionet Metal Remote Control RC 2" on page 30*). Acknowledge your selection with the **OK** key.

8.5 Bass manager

8.5.1 Loudspeaker

Choose your system configuration according to your speaker setup.

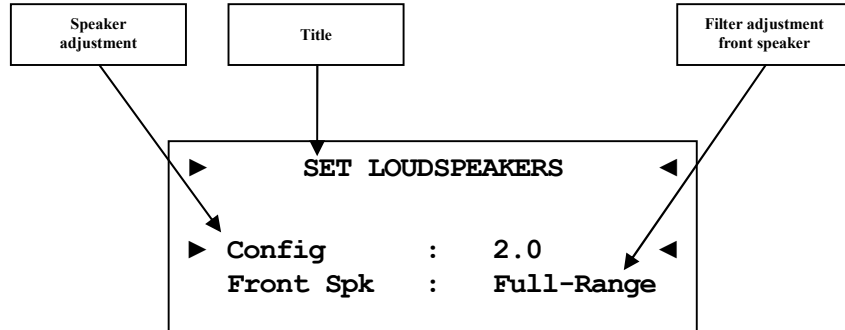

Config: Setup your speaker configuration.

2.0 no Sub Subwoofer output is disabled.

2.1 Subwoofer output is activated and ready to support one mono subwoofer.

2.2 mono Subwoofer output is activated and ready to support two mono subwoofers.

2.2 stereo Subwoofer output is activated and ready to support stereo subwoofers (L/R).

Multiroom The subwoofer output is re-configured to MultiRoom mode, and a separate volume control for the second listening zone is activated. In Multiroom mode the cinch outputs of output **SUB** correspond to left (**Sub 1**) and right (**Sub 2**) channel of the second listening zone.

Front Spk: Adjust your front speaker configuration

Full-Range: the speakers reproduce the full frequency range. Select this option, if your speakers are able to reproduce bass below the crossover frequency. If you use this setup with a subwoofer, your system could create a stronger bass foundation (see section: **"8.5.2 - X-Over" on page 56**).

HP-Filtered: Bass below the cross over frequency is redirected to the subwoofer output channel(s). Please use this option for small speakers, which are not capable of reproducing frequencies below the cross over frequency.



Note

- Control the volume of the second listening zone with the software Audionet RCP.


- If you set the front speakers to **HP-Filtered**, the analog input signal of any analog input channel runs through the internal analog-to-digital convertor. In normal operation mode the display provides the information whether the signal is converted from analog to digital (= **A/D Converted**) or if it stays in the analog domain (= **Pure Analog**).
- Also see section *"8.4.6- ADC attenuation" on page 53*.



Tip

- For a more comfortable access, use the directional keys on the Audionet Metal Remote Control *RC 2* (see section *"7- Audionet Metal Remote Control RC 2" on page 30*). Acknowledge your selection with the **OK** key.

8.5.2 X-Over

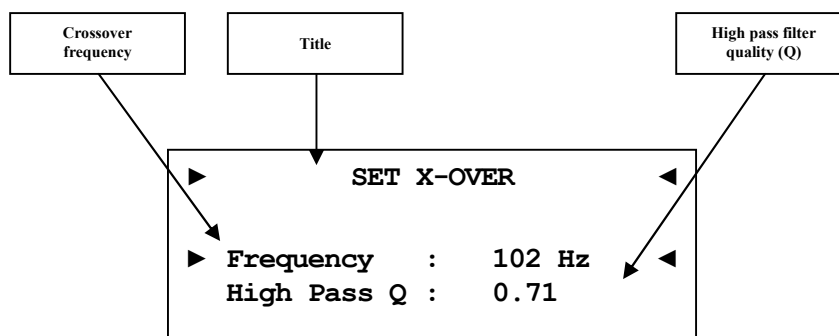

Now you have to adjust the cross over frequency for the speakers. The frequency defines the point of operation for the corresponding filters of your loudspeaker setup. Adjust the Q factor of the current high pass filter. The default setting is 0.71 and should only be altered by experts.



Note


- You will see an extra EQ-curve in the equalizer window for front speakers and subwoofer in your Audionet RCP software.



Tip

- For a more comfortable access, use the directional keys on the Audionet Metal Remote Control *RC 2* (see section *"7- Audionet Metal Remote Control RC 2" on page 30*). Acknowledge your selection with the **OK** key.

8.5.3 Subwoofer volume offset

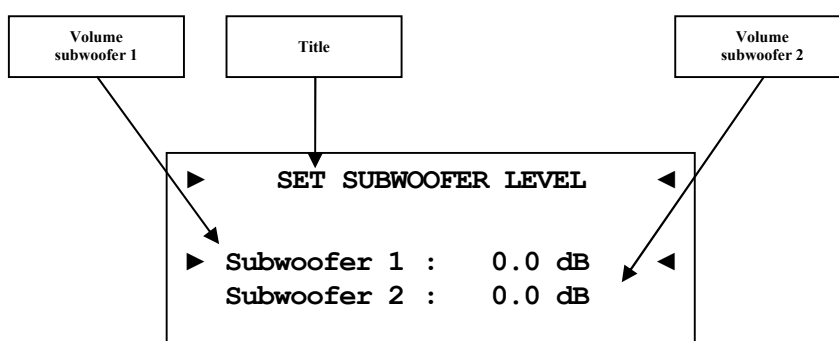

Adjust the differences in volume between mains channel Left / Right and subwoofer channel(s). If you setup your system to support two subwoofers, the DNA allows you to adjust both subwoofer volume offsets separately.




Tip

- For a more comfortable access, use the directional keys on the Audionet Metal Remote Control *RC 2* (see section *"7- Audionet Metal Remote Control RC 2" on page 30*). Acknowledge your selection with the **OK** key.

8.5.4 Subwoofer phase

You can select the phase of your subwoofer channel(s).

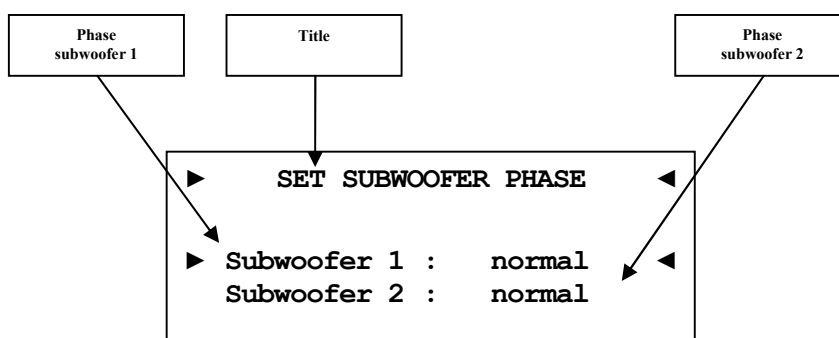

normal 0° phase shift
inverted 180° phase shift



Note

- To achieve a precise subwoofer setup you may also use the virtual subwoofer offset (see section: *"8.6.2 - Virtual subwoofer offset" on page 59*).
- For 0° phase shift: The subwoofer is positioned in same direction as the main speaker. Sound propagation is the same with each speaker.
- For 180° phase shift: The subwoofer is positioned behind the listening position and the chassis membrane is orientated inverse to the main speaker




Tip

- For a more comfortable access, use the directional keys on the Audionet Metal Remote Control RC 2 (see section *"7- Audionet Metal Remote Control RC 2" on page 30*). Acknowledge your selection with the **OK** key.

8.6 Delay manager

8.6.1 Speaker distance

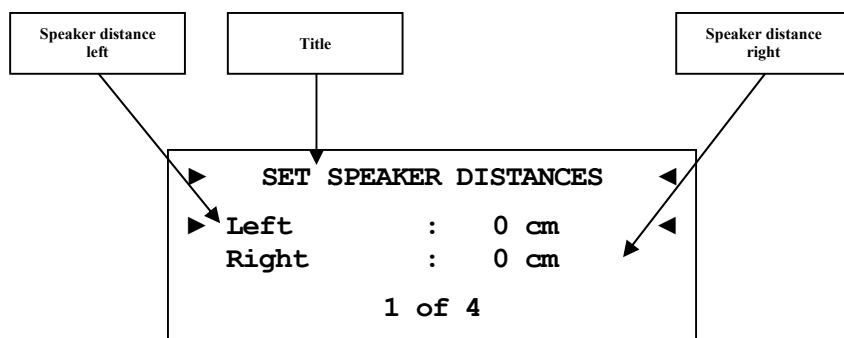

Use this menu to enter the distances from your speakers to your listening position. The distance ranges from 0 to 700 cm in steps of 5 cm. According to the entered distances, the DNA calculates the necessary delays of each channel to ensure that all signals from all speakers arrive at the same time at the listening position.



Note


- The DNA supports setting up the subwoofer distance(s) as well.



Tip

- For a more comfortable access, use the directional keys on the Audionet Metal Remote Control *RC 2* (see section "*7- Audionet Metal Remote Control RC 2*" on page 30). Acknowledge your selection with the **OK** key.

8.6.2 Virtual subwoofer offset

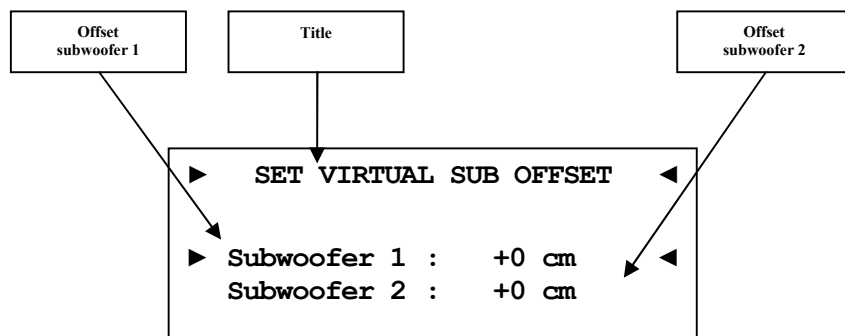

This option virtually moves the subwoofer relative to the listening position (= adjusting the phase of the subwoofer). Use **positive** values, if you want to **delay** the signal from the subwoofer relative to all other channels. Use **negative** values, if the signal from the subwoofer should arrive **earlier** than the signals from all other speakers.



Note


- If you configured your system for two subwoofers, you are able to adjust the virtual position of both subwoofers independently.



Tip

- For a more comfortable access, use the directional keys on the Audionet Metal Remote Control *RC 2* (see section "*7- Audionet Metal Remote Control RC 2*" on page 30). Acknowledge your selection with the **OK** key.

8.7 Network setup

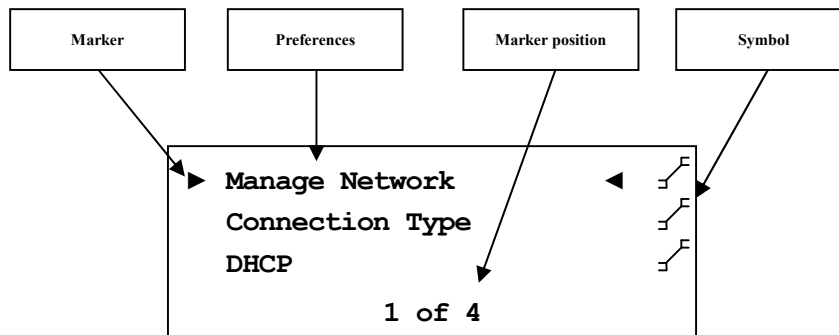

Your DNA is set to receive DHCP* information from your network. If you connect your device to a wired network, it should be ready to use. For use of fixed IP address, you may contact your network administrator to get the information you need to setup the DNA correctly for your network.

Use keys **up** / **down** on the front panel or keys **▲** / **▼** of the Audionet Metal Remote Control *RC 2* to alter the character marked by the cursor. Press and hold **set** for longer than 2 seconds or press key **▶** to move the cursor one position to the right. Key **◀** moves the cursor one position to the left. To erase the character marked by the cursor use key **↵**. To finish editing, press **set** or **OK**.




Note

- You will find a step-by-step example for network configuration at the end of the section (see section *"8.7.10 - Example for Network setup" on page 73*).
- Most network related terms are defined in glossary (see section *"10.1 - Glossary" on page 83*).

*see section: *"10.1 - Glossary" on page 89*

8.7.1 Manage Network

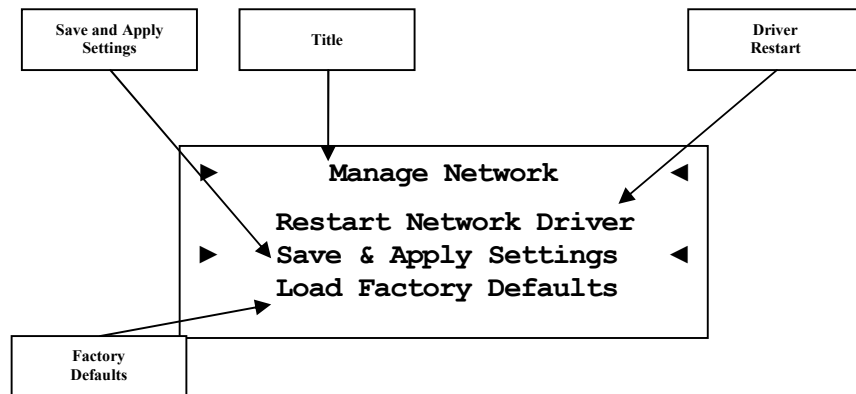


In this menu, you find the basic setup for managing the network preferences of your DNA. The following explains the menu in detail.

Use keys **up** / **down** on the front panel or keys **▲** / **▼** of the Audionet Metal Remote Control *RC 2* to select desired menu option. To acknowledge selected option, press **set** or **OK**.

8.7.1.1 Restart Network Driver

Sometimes it might be necessary to restart the network driver of the DNA. With this function, you are able to restart the driver without having to switch off the device completely. The driver restarts with its current settings.

Select this menu item and confirm your selection with **set** or **OK**. The DNA issues the following message:

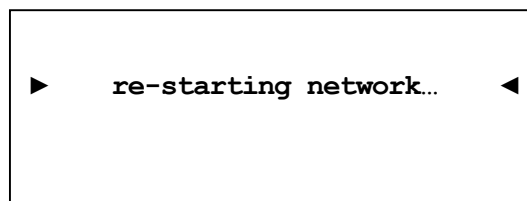

It takes about 30 seconds for the driver to restart. Then your Audionet device will be available in the network again.

8.7.1.2 Save & Apply Settings

You have to select this option every time you finished the network configuration and want to save and apply the new values. Any changes made to your network setup will be dismissed without saving and applying unless you select this particular option.

Select this menu option and confirm your selection with **set** or **OK**. It takes about 30 seconds for the driver to restart. Then your Audionet device will be available in the network again.



Note

- You have to execute this menu option if you want to save and apply your latest changes to the network settings. Otherwise, your configuration will be dismissed!

8.7.1.3 Load Factory Defaults

This function allows you to restore the factory settings of your DNA's network driver. The DNA is factory-set to wired Ethernet connection with DHCP activated. This way, if you connect your device to a wired network, it should be ready to use.

Select this menu option and confirm your selection **set** or **OK**. The DNA loads now the factory default settings.


After successfully loading the factory defaults, the cursor automatically marks the menu item **Save & Apply Settings**. You must execute this menu item as described in section *"8.7.1.2 - Save & Apply Settings"* on *page 62* to apply the factory defaults.



Note

- You have to execute menu item **Save and Apply Settings** if you want to save and apply the factory default settings. Otherwise, this configuration will be dismissed!
- If you accidentally selected this option and the factory default settings are loaded, you are able to exit the menu with the key ***** of your Audionet Metal Remote Control *RC 2* or by holding down the **set** key for longer than 2 seconds. This way the settings accidentally loaded will not be activated and your previous settings will remain.

8.7.2 Connection Type

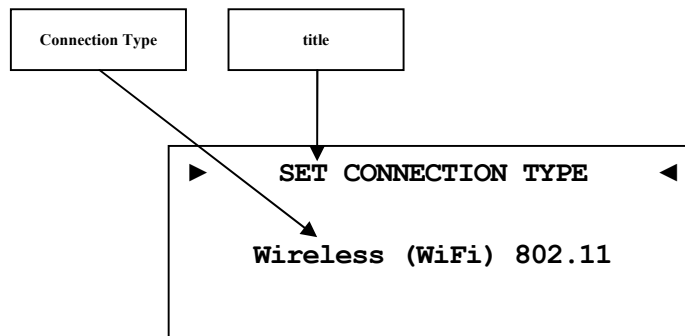

Wired Ethernet Factory setting. Your DNA uses a wired network connection (Ethernet connection).

Wireless (WiFi) Your DNA establishes a wireless connection via the included WLAN Antenna.

The menu **"0 - Enter the** port number for communication between DNA and the software Audionet RCP or Android app aMM or iOS app iMM. If necessary, you may adjust the port number in a range of 50000 to 59999. The factory default value is 54321. Changing the default value will only be necessary if this port number is already used in your network. If necessary, ask your network administrator for support.




Tip

- Use directional keys ◀/▶ on your Audionet Metal Remote Control RC 2 to adjust port number. Confirm with **OK** key.

Wireless setup" *on page 67* and its submenus are only available if you select **Wireless (WiFi) 802.11**.

8.7.3 DHCP

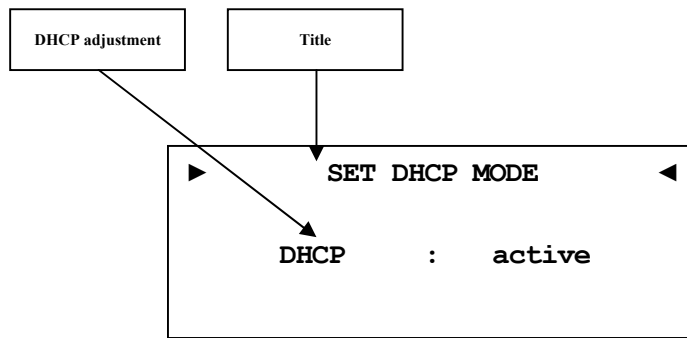

disabled DHCP client mode is disabled

active Your DNA will try to get information via DHCP.

You do not need to setup the following menu items if the IP address is received from a DHCP server. Menu item IP address, IP mask, gateway and DNS are without effect, and they are overwritten by DHCP information.



Note


- If DHCP is active the following menu items **IP Address**, **IP Mask**, **Gateway** and **DNS** are not available as this information are provided by the DCHP server in your network.



Tip

- For a more comfortable access, use the directional keys ◀ / ▶ on the Audionet Metal Remote Control RC 2 (see section "*7- Audionet Metal Remote Control RC 2*" on page 30). Acknowledge your selection with the **OK** key.

8.7.4 IP Address

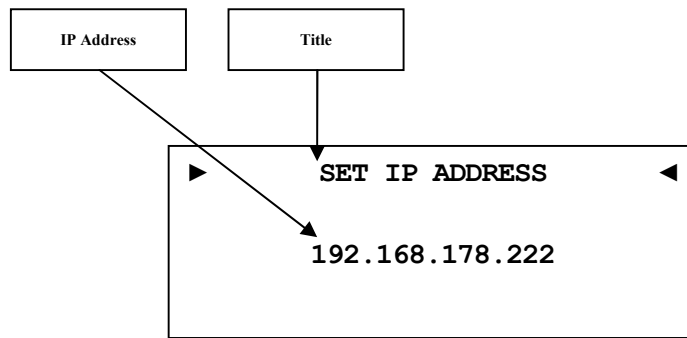

Enter the fixed IP address you would like to assign to the DNA.

The IP address type is IPv4 (e.g. 192.168.178.222).



Tip


- Use the directional keys on your Audionet System Remote Control *RC 2*. Confirm everything with the **OK** key.



Note

- Each block of an IP address consists of three digits. Sometimes the triplets are not written down in full length, i.e. the leading zeros are omitted. For a valid IP addresses you have to always enter all 3 digits. If necessary, amend the leading zeros. Example: 0.1.10.100 has to be entered as 000.001.010.100.

8.7.5 IP Mask

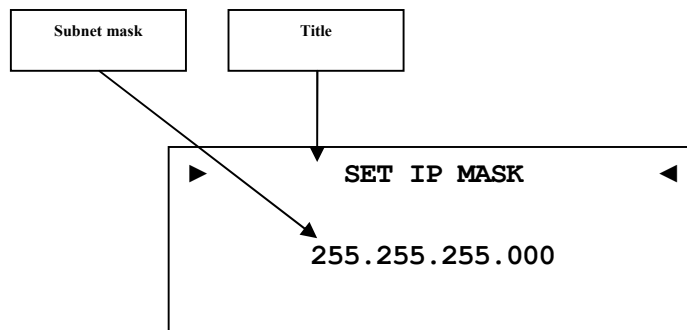

Enter the desired subnet mask (e.g. 255.255.255.000).



Tip


- Use the directional keys on your Audionet Metal Remote Control RC 2. Confirm everything with **OK** key.



Note

- Each block of an IP address consists of three digits. Sometimes the triplets are not written down in full length, i.e. the leading zeros are omitted. For a valid IP addresses you have to always enter all 3 digits. If necessary, amend the leading zeros. Example: 0.1.10.100 has to be entered as 000.001.010.100.

8.7.6 Gateway

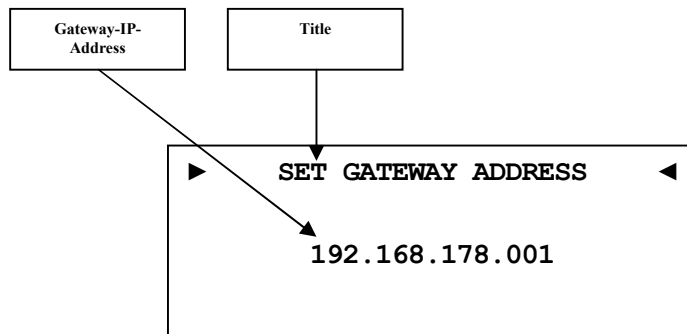

Enter the IP address of the gateway in your network (e.g. 192.168.178.001).



Tip


- Use the directional keys on your Audionet Metal Remote Control RC 2. Confirm everything with **OK** key.
- The gateway address is usually the same as the router IP address.



Note

- Each block of an IP address consists of three digits. Sometimes the triplets are not written down in full length, i.e. the leading zeros are omitted. For a valid IP addresses you have to always enter all 3 digits. If necessary, amend the leading zeros. Example: 0.1.10.100 has to be entered as 000.001.010.100.

8.7.7 DNS

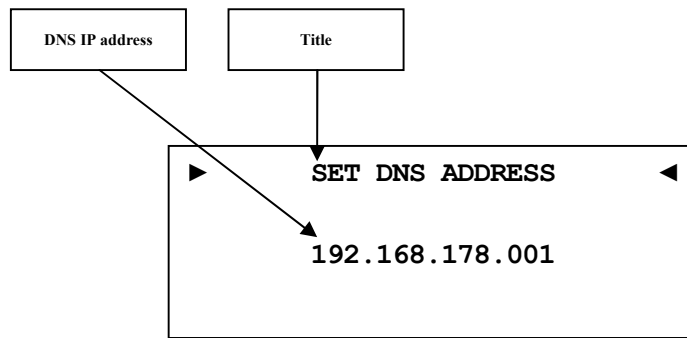

Setup your DNS IP address (e.g. 192.168.178.001).



Tip


- Use the directional keys on your Audionet Metal Remote Control *RC 2*. Confirm everything with **OK** key.
- The DNS IP address is usually the same as the router IP address.



Note

- Each block of an IP address consists of three digits. Sometimes the triplets are not written down in full length, i.e. the leading zeros are omitted. For a valid IP addresses you have to always enter all 3 digits. If necessary, amend the leading zeros. Example: 0.1.10.100 has to be entered as 000.001.010.100.

8.7.8 RCP port

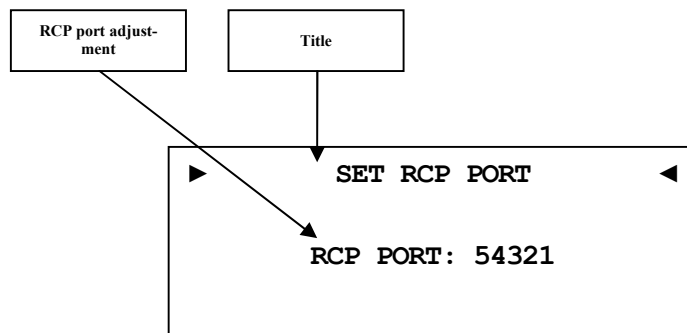

Enter the port number for communication between DNA and the software Audionet RCP or Android app aMM or iOS app iMM. If necessary, you may adjust the port number in a range of 50000 to 59999. The factory


default value is 54321. Changing the default value will only be necessary if this port number is already used in your network. If necessary, ask your network administrator for support.



Tip

- Use directional keys ◀/▶ on your Audionet Metal Remote Control RC 2 to adjust port number. Confirm with **OK** key.

8.7.9 Wireless setup

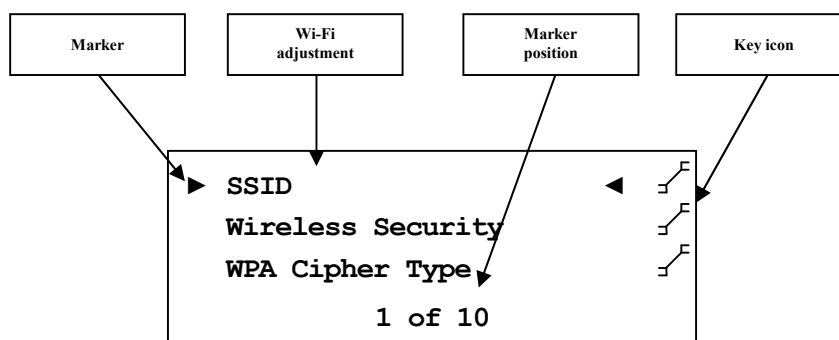

All Wi-Fi settings have to be entered manually.

Gather the necessary information to setup the Wi-Fi connection from the settings of your router or access point. If you have no access to this information, please ask your network administrator.

Depending on the security type for your Wi-Fi connection the menu options might differ. If you select WPA or WPA2 security, please continue with section 0 for further setup. If you selected the old and less secure method WEP, then you have to adjust the settings in sections 0 to 0.



Tip

- Alternatively, you may use the software Audionet RCP for the Wireless setup. For the time of configuration, you need to connect your DNA to the network by wire. Later you may disconnect the cable for using a Wi-Fi connection.




Important

- For security reasons we strongly recommend you select the up-to-date WPA2 encryption method for your Wi-Fi connection!

8.7.9.1 SSID

Enter the name of your Wi-Fi connection. Please mind the case sensitive input.

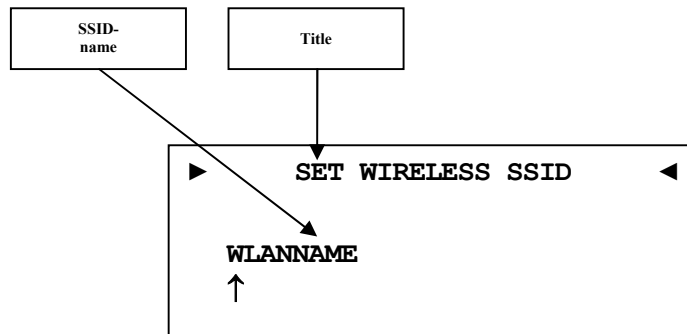


Note

- Use keys **up** / **down** on the front panel or keys **▲** / **▼** of the Audionet Metal Remote Control *RC 2* to alter the character marked by the cursor. Press and hold **set** for longer than 2 seconds or press key **▶** to move the cursor one position to the right. Key **◀** moves the cursor one position to the left. To finish editing, press **set** or **OK**.
- To erase the character marked by the cursor use key **↵**. In this case the key **↵** does not return to the parent menu. To exit the SSID name setup without saving changes please press key *****.

8.7.9.2 Wireless security

Select your Wi-Fi security method. Please see the configuration of your router or access point which setting you need. The security method of DNA and router / access point has to be the same.

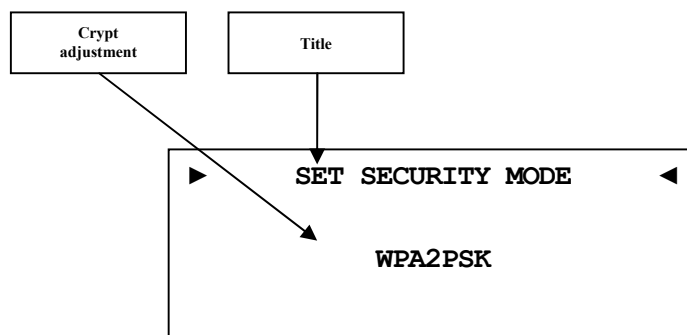

None

no crypt type selected (not recommended).

WEP

Wired Equivalent Privacy, out-dated and unsecure security standard (not recommended).

WPAPSK	Wi-Fi Protected Access Pre-Shared Key was an transitional standard to replace WEP until the new WPA2 was defined (not recommended).
WPA2PSK	Wi-Fi Protected Access 2 Pre-Shared Key is the regular standard for Wi-Fi security (recommended).



Note

- Wikipedia links to all security terms can be found in section *"10.2.1 - Wireless security" on page 85*.




Tip

- Use directional keys ◀ / ▶ on your Audionet Metal Remote Control RC 2 to adjust port number. Confirm with **OK** key.
- In the preferences of some new routers / access points security method WPA2PSK is referred to as "WPA2PSK – Personal" or "WPA2 – Personal".

8.7.9.3 WPA pass phrase

Enter your WPA passphrase. Please note that passphrase is case sensitive. This menu item is only available if you selected **WPAPSK** or **WPA2PSK** for the security method.

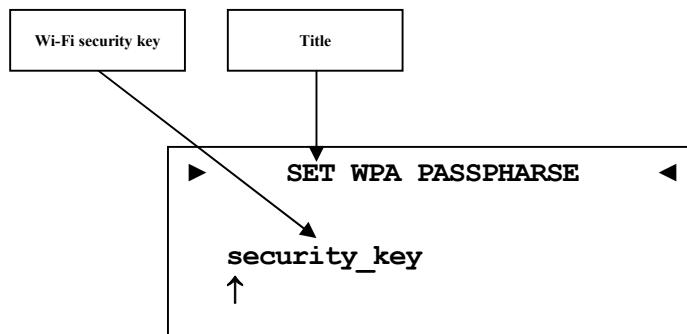


Note

- Use keys **up** / **down** on the front panel or keys ▲ / ▼ of the Audionet Metal Remote Control RC 2 to alter the character marked by the cursor. Press and hold **set** for longer than 2 seconds or press key ▶ to move the cursor one position to the right. Key ◀ moves the cursor one position to the left. To finish editing, press **set** or **OK**.
- To erase the character marked by the cursor use key ↵. In this case the key ↵ does not return to the parent menu. To exit without saving changes please press key *.

- The passphrase has to consist of at least 8 characters. Maximum length is 63 characters. The longer the passphrase the more secure the connection. For further information, see the documentation of your router / access point.

8.7.9.4 WEP authentication

Select the WEP setup to your network.

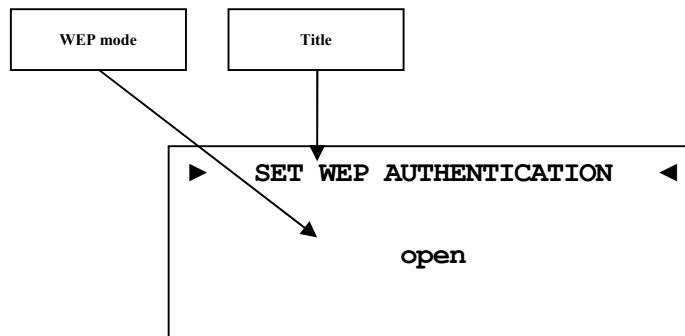

open Open Authentication
shared Shared-Key-Authentication




Note

- Choose the authentication mode with the directional keys. ◀ for **open** and ▶ for **shared**. Confirm the adjustment with the **OK** key.
- We strongly recommend using WPA2PSK standard to secure your Wi-Fi connection. WEP is not secure.

8.7.9.5 WEP key index

Select the Index Key 0-3

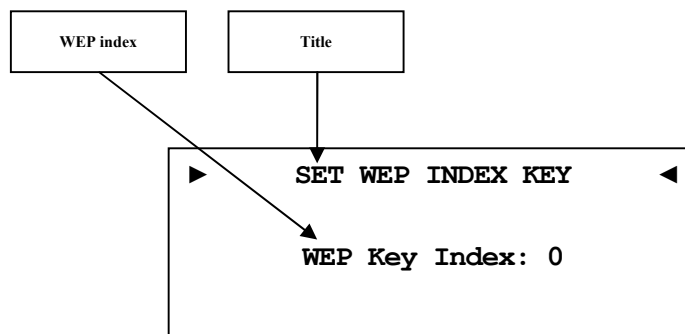




Note

- Select the WEP key index with your directional keys ◀ / ▶. Confirm the adjustment with the **OK** key.

8.7.9.6 WEP key 0-3

Enter the WEP key phrase for key 0 - 3.

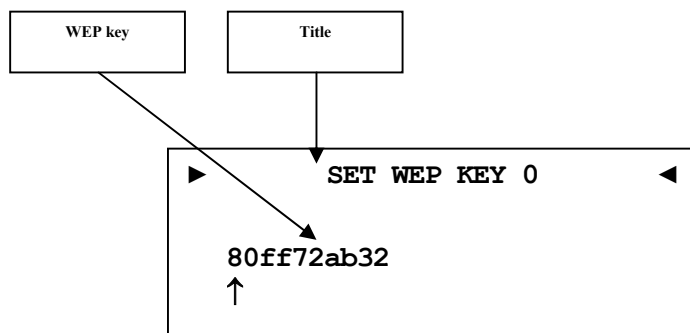


Note


- Use keys **up** / **down** on the front panel or keys ▲ / ▼ of the Audionet Metal Remote Control *RC 2* to alter the character marked by the cursor. Press and hold **set** for longer than 2 seconds or press key ▶ to move the cursor one position to the right. Key ◀ moves the cursor one position to the left. To finish editing, press **set** or **OK**.
- To erase the character marked by the cursor use key ↵. In this case the key ↵ does not return to the parent menu. To exit without saving changes please press key *.
- A WEP key contains only numbers 0-9 and letters a-f.
- Length of WEP keys:
64 bit hex WEP key: 10 characters
128 bit hex WEP key: 26 characters.

8.7.10 Example for Network setup


In this example, we will use the Audionet Metal Remote Control to make all adjustments (see section "7 - Audionet Metal Remote Control RC 2" on page 30). Open the system menu with key ***** and mark the menu item **Network Setup** with the directional keys **▲** / **▼**. Confirm with **OK** key.

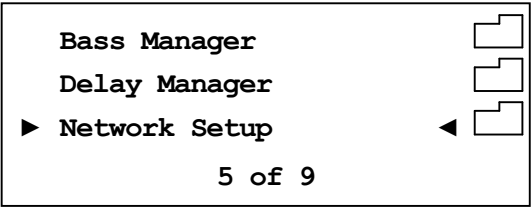


Switch to menu item **Connection Type**.

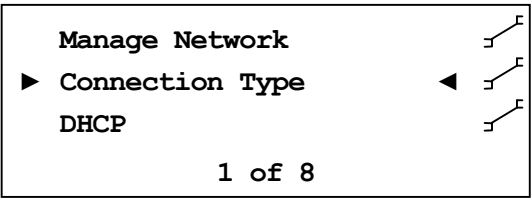


Choose your preferred connection type with the keys **◀** / **▶**. Connection types **Wired Ethernet** and **Wireless (WiFi) 802.11** are available. Confirm with **OK**.

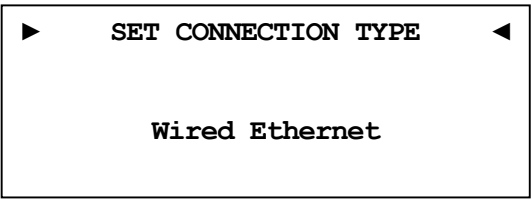

In this example, we assume that you do not use DHCP in your network. Therefore, we disable the DHCP function and set a fixed IP address. Open the menu item **DHCP**, press the key **◀** to select **disabled** and confirm with **OK** key. The DNA recognizes the new setting and switches back to the Network Setup menu.

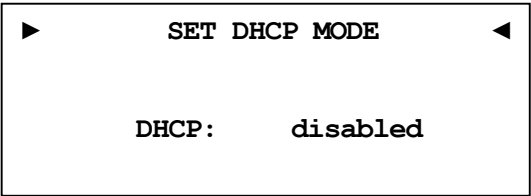


Now you have to enter the IP address you selected for your DNA. (e.g. 192.168.178.222 or 192.168.000.222 or 192.168.001.222).

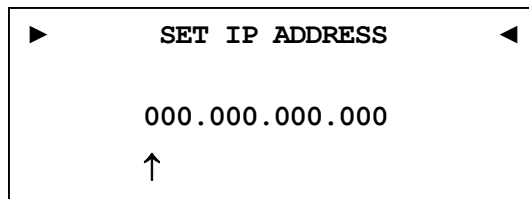


A rectangular screen with a black border. At the top, the text "SET IP ADDRESS" is centered between two black triangles pointing left and right. Below this, the IP address "000.000.000.000" is displayed. Underneath the address, an upward-pointing arrow indicates the cursor position at the first digit of the first octet.

Enter the IP address using the keys ▲ / ▼ of the Audionet Metal Remote Control *RC 2* to alter the character marked by the cursor. Press key ► to move the cursor one position to the right. Key ◀ moves the cursor one position to the left. To finish editing, press **set** or **OK**.

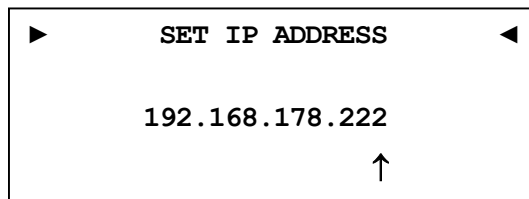


A rectangular screen with a black border. At the top, the text "SET IP ADDRESS" is centered between two black triangles pointing left and right. Below this, the IP address "192.168.178.222" is displayed. Underneath the address, an upward-pointing arrow indicates the cursor position at the last digit of the last octet.

Select the menu item **IP Mask** and compare the default settings with the data of your network. The default value 255.255.255.000 is probably suitable for most of the home networks. Confirm with **OK**. Otherwise, enter your settings as described above with IP address.

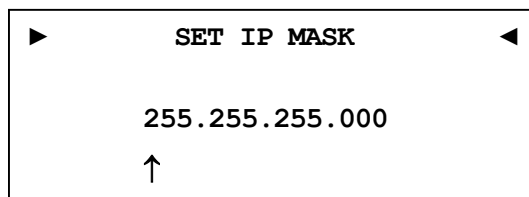


A rectangular screen with a black border. At the top, the text "SET IP MASK" is centered between two black triangles pointing left and right. Below this, the IP mask "255.255.255.000" is displayed. Underneath the mask, an upward-pointing arrow indicates the cursor position at the first digit of the first octet.

The gateway in your network is probably the router, so you have to set the router's IP address as the gateway address. Enter the correct address for your network and confirm.

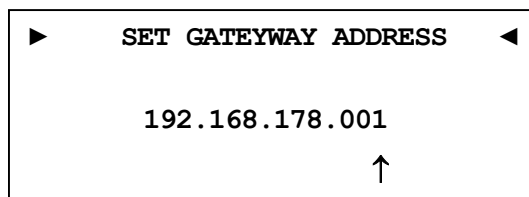

A rectangular screen with a black border. At the top, the text "SET GATEWAY ADDRESS" is centered between two black triangles pointing left and right. Below this, the gateway address "192.168.178.001" is displayed. Underneath the address, an upward-pointing arrow indicates the cursor position at the last digit of the last octet.

Most of the times, the DNS address is the same like the router's IP address. If you use a different DNS, enter the DNS IP address which is correct for your network configuration.

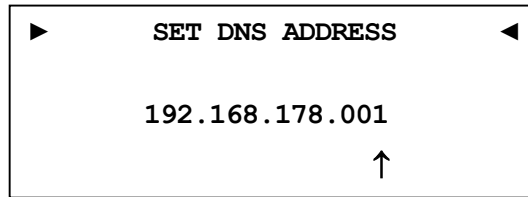

SET DNS ADDRESS

192.168.178.001

↑

The setup for using a fixed IP address is now completed.


If you use your DNA in a wired network, the network setup is completed. You can now save and apply your network settings. In case you would like to use a Wi-Fi connection, skip to paragraph "Wi-Fi adjustment".

Save network profile

Go to menu item **Manage Network** and select **Save & Apply Settings**. Confirm with **OK**. The new created network profile with all its settings is now saved and will immediately be applied.

Wi-Fi adjustment

Go to menu **Manage Network** and select **Connection Type**. Now change the setting to **Wireless (WiFi) 802.11** and confirm with **OK**. Menu item **Wireless Setup** is now available in the menu **Network Settings**. Now you have to enter the network name (SSID) and network security key. If you do not have this information at hand, check the configuration settings of your router / access point or ask your network administrator.

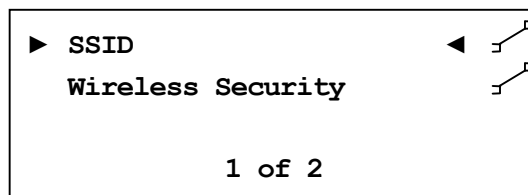

SSID

Wireless Security


1 of 2



Note

- You have to set **Connection Type** to **Wireless (WiFi) 802.11**. Otherwise, menu item **Wireless Setup** will not be available.

Select **SSID** and set the network name.

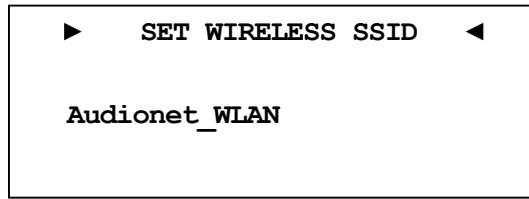


► SET WIRELESS SSID ◀

Audionet_WLAN

Please note that the network name (SSID) is case sensitive. Use the keys ▲ / ▼ to enter characters. With the ◀/► keys switch to the previous / next position. The cursor does not step forward automatically. Confirm your input with **OK**.


Now select your security mode.

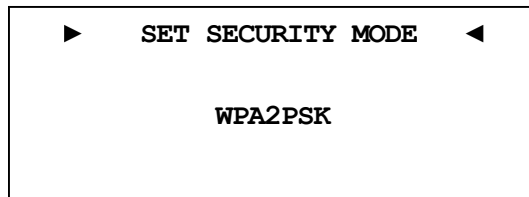

► SET SECURITY MODE ◀

WPA2PSK

You have to choose between **WEP**, **WPAPSK** and **WPA2PSK**. All settings have to be confirmed with the **OK** key. As the WEP mode is out of date and unsecure, we only describe the setup of WPA2PSK security mode. At last select menu item **WPA Pass Phrase** and enter your Wi-Fi security key. Example: **1x2y3z4a5b**

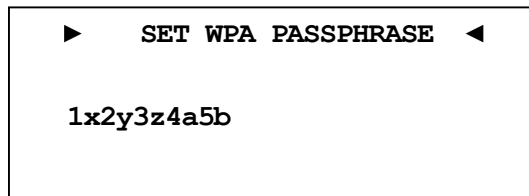

► SET WPA PASSPHRASE ◀

1x2y3z4a5b

Confirm your input with **OK**. Network settings are entered and ready to be saved and applied.

Save network profile


Select **Save & Apply Settings** from the menu item **Manage Network** and confirm with **OK**. The new created network profile with all its settings is now saved and will immediately be applied.

8.8 Factory Default Reset

Use item **Factory Default Reset** from the main menu to reset the DNA completely or in parts to the factory default settings.

Press and hold key **set** on front panel or use key ***** of the Audionet Metal Remote Control *RC 2* to enter the main menu of your DNA. Select the menu item **Factory Default Reset** by using the **up / down** keys on the front panel or keys **▲ / ▼** of the remote control. Confirm your selection by pressing the **OK** key or press the **set** key on the front panel shortly.

Now select one of the five available menu items. Confirm your selection by pressing the **OK** key or press the **set** key on the front panel shortly.

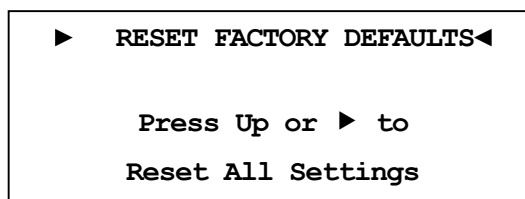

Press **up** at the front panel or the **►** on the remote control to start the reset procedure reverting the settings to the factory default values. After completing the reset procedure the DNA will power down and then perform a restart.

The individual menu items reset the following:

Reset All Settings	reset of all settings (except the settings of the network module). This function comprises the menu items Reset EQ Settings , Reset User Settings and Reset FM Stations in one single function.
Reset EQ Settings	reset all settings of the digital equalizer.
Reset User Settings	reset all User Settings 1 to 20.
Reset Network Module	reset the network module to factory defaults.
Reset FM Stations	reset all stored FM radio station presets.



Important

- Use cursor key **►** of the remote control or key **up** on the front panel to start the selected reset function.
- After resetting the network module to its factory defaults the connection to your network maybe lost and will only be recovered after the correct setup of the network configuration depending on your network.
- During the reset procedure the progress bar in the display will stop several times for a short moment. This is normal behaviour and no sign of any malfunction.

- If you execute one of the resets **Reset EQ Settings**, **Reset User Settings**, **Reset FM Stations** or **Reset All Settings**, the settings of the network module will be preserved. In order to reset the DNA completely to factory default settings you have to reset the network module after resetting the user settings (**Reset All Settings**) .

8.9 User settings


The DNA is able to store 20 separate User Settings in its non-volatile memory.

Select this function with the keys on the front panel or with the Audionet Metal Remote Control *RC 2*. Furthermore, you may use the software Audionet RCP (see Audionet RCP user's manual).

A user setting contains all information, which is currently set, e.g. all EQ adjustments for all channels, complete speaker setup, volume offsets etc.

Example for usage: Set EQ to reduce amount of low frequencies and store it under the name of "night mode".


In normal operation mode, the display informs about the currently active User Settings:

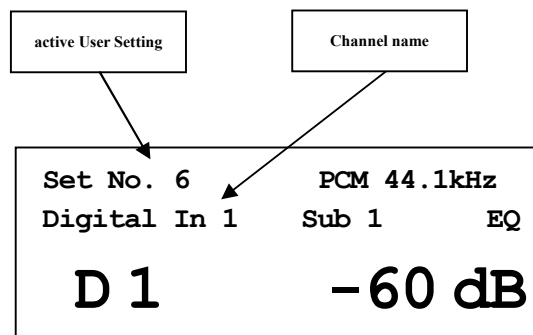


Note

- If no user setting is selected for current input channel, the display space for the active User Setting will be empty.
- If you load a User Setting for the current input channel and change than one of the channel setting, the display will no longer show this User Setting as the current input channel settings do not match the content of the User Setting.
- If you change the channel settings of the current input channel and the settings match one of the User Settings, then the display will show the name of this User Setting.
- If two or more User Settings in your library of 20 settings are exactly the same, then the display will automatically show always the User Settings with the lowest slot number.

8.9.1 Save user setting

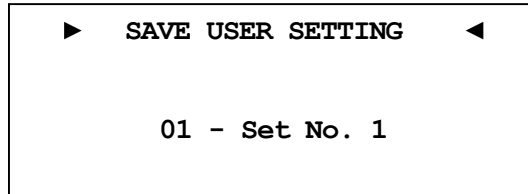

Open the system menu with key ***** on the Audionet Metal Remote Control *RC 2* or push and hold **set** key on front panel for longer than 2 seconds. Navigate to menu item **Save User Setting** with **up / down** or **▲ / ▼** and push **set** or **OK**. The display reads:

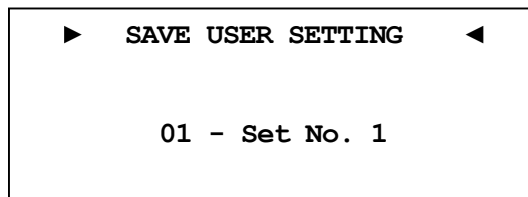

Use keys **up / down** or **▲ / ▼** to select the desired slot number where you would like to save the current setup. Push **set** or **OK** to acknowledge your selection. All current settings are saved to the selected slot.




Note

- If you save to a user setting all existing data will be overwritten.
- If you do not want to do the complete setup again, copy the desired user setting to a different slot and refine the settings, if necessary. For that purpose, load the existing user setting and store it to a different memory slot.


8.9.2 Load user setting

Open the system menu with key ***** on the Audionet Metal Remote Control *RC 2* or push and hold **set** key on front panel for longer than 2 seconds. Navigate to menu item **Load User Setting** with **up / down** or **▲ / ▼** and push **set** or **OK**. The display reads:

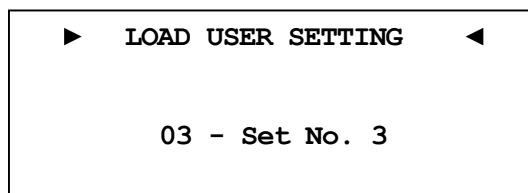

Use keys **up / down** or **▲ / ▼** to select the desired slot number which you would like to retrieve. Push **set** or **OK** to acknowledge your selection. All current settings are overwritten by the information previously saved to the selected slot.


8.10 Device info

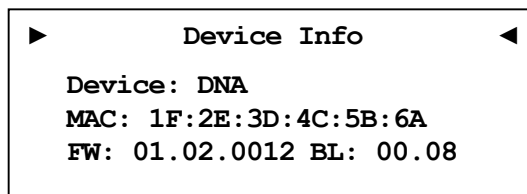

Here you will find the information about your hardware and software.

- MAC address
- Firmware version
- Boot loader version

Proceed to the second page by pressing the **set**, **◀ / ▶** or **OK** key. The second page contains the following information:

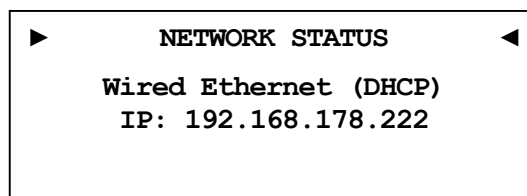

- Connection Type
- DHCP adjustment
- IP Address of the device

9 Security system

Your Audionet DNA device and loudspeakers are protected by a complex protection circuitry. In case of a malfunction, the display informs the user about the nature of the detected error in plain text:

Error message	Possible cause
Overload	short circuit or defective speaker
Overheating	ventilation slots covered
High Frequency	defective preamplifier-stage
DC Voltage	exceeding DC level at the output: defective preamplifier-stage or source unit
Power Failure	(temporary) breakdown of mains

Even after powering down the DNA's audio section, the error message still will be shown in the display. Press the **power** key on the front panel to get into the stand-by mode.



Important

- Remove cause of error prior to switching on the DNA again!

10 Additional information

10.1 Glossary

- **Switch:**

A switch is the central connection unit in a computer network. Every device is connected directly or indirectly to the switch.

- **Router:**

A router is sharing out data through the network. Usually the router device takes over other several features, such as Gateway-Server, DHCP-Server, DNS-Server, Switch, WLAN-Access Point, Modem, UPNP-AV and NAS via USB.

- **Access Point:**

An access point is an extension of a router. If a router is incapable of providing WLAN or its WLAN range is too limited, an access point can be connected to one of the LAN ports of the router and extend its functions.

- **Gateway:**

A gateway connects computer or router to other networks (internet) and controls these connections.

- **Modem:**

A modem establishes a connection between LAN and WAN.

Nowadays all devices mentioned above are built in one device, which is called **router**.

- **IP-Address:**

The IP-Address identifies a device in the network. It is comparable to a postal address. An IP address can only be used once within a network!

IPv4 (192.168.0.1) common standard

IPv6 (2001:db8::1428:57ab) future standard

- **DNS-Server:**

A DNS-Server translates textual request to IP addresses and provides simple communication to the internet.

(e.g. www.audionet.de is translated to "194.000.201.201")

- **Proxy:**

Proxy-Server is Usually used in larger network facilities to guarantee more control and security to the network. Data transfer could be more efficient and speeded up. Home networks do not need a proxy.

- **LAN (Local Area Network):**

Localized network (home or company network)

- **Ethernet (cable):**

Ethernet is a technology that specifies hardware and software for wired data networks. An Ethernet connection offers a very good transmission rate and is to be preferred.

- **Power LAN (mains supply):**

With power LAN technology you can connect Ethernet device through your mains supply. Transfer rate could be faster and more stable as a Wi-Fi connection. A disadvantage could be the harmonics, which are produced by such devices and pollute your mains supply.

- **WLAN (Wi-Fi):**

A Wi-Fi connection can be established very quickly, because you need no wire. The mayor disadvantages are the lower data transfer rate and the technical reliability. Physical structures or a large distance to the access point could harm the signal. We recommend wired connection.

- **WAN (Wide Area Network):**

Wide area network connections are used to connect to the internet.

- **Client:**

A client is a device which has no administrative or special jobs in a network (e.g. PC, Notebook, DNA, iPad, etc.).

- **Server:**

Servers provide services to clients or other servers. A server could have multiple services running on it.

- **NAS (Network Attached Storage):**

A NAS is a network storage device, which makes data (e.g. music, pictures, video and documents) easily accessible to all network devices.

- **UPnP-MS (Universal Plug and Play – Media Server):**

UPnP is a defined network standard to connect clients and servers. It is very easy to use, because you do not have to set up a lot. Only connect and play. UPnP media servers are the most common way to provide data through a home network. A media server could also be part of a NAS or router or it could run as program on a Computer.

- **SSID:**

The term SSID is the short form of service set identifier and describes what is generally known as the name of the network. A wireless network must have a name, so that client devices are able to find, identify and connect to the network.

- **Passphrase:**

Every wireless network should be protected by a passphrase. Client devices are only able to access a protected wireless network if they pass the passphrase check. The passphrase is used for authentication and identification and is thus an important element of network security.

10.2 *Link collection*



Note

- We are not responsible for Wikipedia links. If you are looking for scientifically proven information, have a look at referenced science books in wiki article.

10.2.1 Wireless security

WPA: http://en.wikipedia.org/wiki/Wi-Fi_Protected_Access

WPA2: http://en.wikipedia.org/wiki/Wi-Fi_Protected_Access#WPA2

PSK: http://en.wikipedia.org/wiki/Pre-shared_key

EAP (Radius): <http://en.wikipedia.org/wiki/RADIUS>
http://en.wikipedia.org/wiki/Extensible_Authentication_Protocol

WEP: http://en.wikipedia.org/wiki/Wired_Equivalent_Privacy

10.3 Equalizer filter type

The following describes all the different EQ filters. All parameters are listed. Please follow the Wikipedia links for detailed information.



Note

- We are not responsible for Wikipedia links. If you are looking for scientifically proven information, have a look at referenced science books in wiki article.

10.3.1 Peak-Filter

Gain range: -12 dB to +6 dB

Frequency range: 20 to 20000 Hz

Filter quality (Q): 0.3 – 8.0

Wikipedia: en.wikipedia.org/wiki/Band-pass_filter

10.3.2 High shelf filter

Gain range: -12 dB to +6 dB

Frequency range: 20 to 20000 Hz

Wikipedia: [en.wikipedia.org/wiki/Equalization_\(audio\)#Shelving_filter](https://en.wikipedia.org/wiki/Equalization_(audio)#Shelving_filter)

10.3.3 Low shelf filter

Gain range: -12 dB to +6 dB

Frequency range: 20 to 20000 Hz

Wikipedia: [en.wikipedia.org/wiki/Equalization_\(audio\)#Shelving_filter](https://en.wikipedia.org/wiki/Equalization_(audio)#Shelving_filter)

10.3.4 High-pass filter 2nd order

Attenuation at set Frequency: 3 dB

Filter quality (Q): 0.3 to 2.0

Attenuation below the set frequency is 40 dB per decade.*

Wikipedia: en.wikipedia.org/wiki/High-pass_filter

* Note: Technical considerations describe order-n filters with attenuation of $n \cdot 20 \text{ dB/Decade}$, the corresponding description often used in music related topics is $n \cdot 6 \text{ dB/Octave}$.

10.3.5 Low-pass filter 2nd order

Attenuation at set Frequency: 3 dB

Filter quality (Q): 0.3 to 2.0

Attenuation above the set frequency is 40 dB per decade.

Wikipedia: en.wikipedia.org/wiki/High-pass_filter

10.3.6 High-pass filter 1st order

Attenuation at set Frequency: 3 dB

Attenuation below the set frequency is 20 dB per decade.

Wikipedia: en.wikipedia.org/wiki/High-pass_filter

10.3.7 Low-pass filter 1st order

Attenuation at set Frequency: 3 dB

Attenuation above the set frequency is 20 dB per decade.

Wikipedia: en.wikipedia.org/wiki/High-pass_filter

10.4 Error handling (FAQ)

Problem with internet radio streams:

A good, stable and fast connection to the internet, network is the most significant item. If your local conditions are fine, dropouts may be the problem of the radio stations broadcast. Switch to another station. If there is no problem it is perhaps a problem of the radio stations broadcast. Maybe it is overloaded.

Local problems could be an overload of your network, by downloads from the internet or data, which is moved through your network as well as other streaming (e.g. video). Reduce or quit connections to receive internet radio without dropouts. A bad Wi-Fi connection could also cause dropouts.

No control:

Switch off your device through the power button on the front panel. Then switch off the mains circuit breaker on the back panel. If there is no action while you press the power button on the front, directly take the mains circuit breaker on the back panel. Wait 20 to 30 seconds until you switch on again. If there is still a problem, contact your local dealer for support.

Which control has no function: If the remote control does not react, try the front panel keys, maybe it is only a problem of the remote control.

Remote control has no function:

Please check the batteries first and replace them if necessary.

Please check the position of the DIP switches (see section *"7.3 - Settings for Audionet DNA" on page 32*).

The software Audionet RCP does not establish a connection to DNA:

Restart your software and search for DNA again.

If this is without success, switch off the DNA (first stand-by, then mains switch on back panel) and wait 30 seconds. Start up your DNA again and switch to NET input. Wait until the display does not read **Booting** anymore. Now start your software Audionet RCP and search for DNA.

If there is still a problem, check your network and network settings or ask your network administrator for support. In case there is still a problem connecting the RCP to the DNA, try resetting the network module to factory defaults (main menu **Factory Default Reset**, menu item **Reset Network Module**) and re-configure your network settings if necessary.

10.5 *Security advice*



Important

- Avoid packaging material, especially plastic bags, to come into children's hands.
- Store and operate the unit in a dry room at a reasonable room temperature.
- Avoid moisture or any liquid to get into the unit.
- Place the device with enough circulation of air.
- **Do not cover**, e.g. with a blanket.
- **Do not open** the case. Unauthorized opening will cause loss of guarantee.
- Prevent short circuit to the outputs.
- Switch off all devices if you plug any cable.
- Use a dry cloth for cleaning.
- If massive trouble on the mains power grid is to be expected. Disconnect all devices from mains to prevent electrical overload. Disconnect antenna and network connections as well.

We would like to wish you many exciting listening experiences with your new Audionet product!

If you still have any questions, do not hesitate to ask your competent Audionet dealer.

10.6 Factory defaults

Option	Default settings
Global Setup	
Headphones	headphones disabled, Audionet Link 2 active
Display	50%
Balance	+ 0 dB
Pre Out	disabled
Auto start	disabled
By-Pass Channel	not selected
Phono Card	missing Pickup type: MM Gain: 40 dB
Power-Off Mode	normal
Serial Port	disabled
Channel Setup	
For each input channel (exception listed)	
Volume Offset	+ 0 dB
Trigger Out	disabled
ADC Attenuation	0 dB disabled (adjustment only with analog input)
DC Servo	disabled (adjustment only with analog input)
Digital EQ	disabled
Channel Name	Digital In 1 .. 4 Optical In 1,2 Streaming In USB Audio In FM-Tuner Line In 1,2 Phono In Balanced In
Bass Manager	
Configuration	2.0
Front Speaker	Full Range
High-Pass Q	0.71
X-Over Freq.	102 Hz
Sub 1,2 Volume Offset	+ 0 dB
Sub 1,2 Phase	normal (0°)
Delay Manager	
Distance Left	0 cm
Distance Right	0 cm
Distance Sub 1	0 cm
Distance Sub 2	0 cm
Virtual Sub Offset 1	0 cm
Virtual Sub Offset 2	0 cm
Parametrical digital EQ	
for all input channels	
Gain	All channel, all MPes: + 0 dB
Q	All channel, all MPes: 1.00
Freq.	L, R: 50,207,725,3147 & 10413 Hz Sub1,2: 31,50,82,120 & 231 Hz

Network Setup	
Network Profile	default
DHCP	active
IP Address	192.168.178.222
IP Mask	255.255.255.000
Gateway	192.168.178.001
DNS	192.168.178.001
RCP Port	54321
Wireless Setup	
SSID	blank
Wireless Security	WPA2PSK
WPA Pass Phrase	blank
WEP Authentication	open
WEP Key Index	0
WEP Key 0	blank
WEP Key 1	blank
WEP Key 2	blank
WEP Key 3	blank

10.7 Specifications

Function	Network-compatible 2.2 channel stereo integrated amplifier / receiver
Power output	2 x 165 Watt at 8 Ω 2 x 280 Watt at 4 Ω 2 x 440 Watt at 2 Ω
Frequency response	Analog: 0 - 500.000 Hz (-3 dB) Digital: max. 96 kHz, depends on sample frequency
attenuation coefficient	typ. 1000 at 100 Hz
THD	k2 typ. -101 dB, k3 typ. -107 dB, @1 kHz, 25 W/4 Ω
THD+N	< -90 dB @1 kHz, 25 W/4 Ω
SNR	> 103 dB (A-rated)
capacitance	> 180.000 μ F
Input analog	3 pair RCA jack, gold plated, Teflon isolated 1 pair XLR balanced, gold plated (Neutrik) 5-pin connector for EPS
Input digital	4 SPDIF RCA jack, gold plated, Teflon isolated 2 SPDIF TosLink 1 USB (A) (for USB stick, ext. hard disk etc) 1 USB (B) Mini, USB Audio 2.0 (asynchronous) 1 RJ45 Ethernet 10/100 BASE-T 1 SMA Connector WLAN
Input impedance	Line input 50 k Ω real XLR input 7 k Ω
Output	2 pair speaker connector 4 mm jack, gold plated 1 pair (Pre Out) RCA jack, gold plated, Teflon isolated 1 pair (Sub/MR Out) RCA jack, gold plated, Teflon isolated 2 Audionet Link, optical 1 headphone output (TSR connector, 6,3 mm, stereo) 1 3.5mm TSR connector mono Trigger Out (12V/5V, 50mA max.) 1 Serial interface RS232
Mains	220 V..240 V or 110..120 V, 50..60 Hz
Power consumption	Stand-By mode: < 1 W (Power-off mode normal , Serial Port disabled) 8 W (Power-off mode normal , Serial Port active) 12 W (Power-off mode quick-start) max. 1400 W

Dimensions	width 430 mm height 130 mm depth 390 mm depth over all 420 mm
Weight	25 kg
Design	Front: brushed aluminum, 10 mm, black anodized, white printing or aluminum natural, 10 mm, anodized, black printing Display: red or blue Cover plate: aluminum, 6 mm, black anodized Side plate: aluminum, 8 mm, black anodized Chassis: sheet steel, 2 mm, black varnished
Specials	<ul style="list-style-type: none"> - Audionet System Remote Control RC 2 - Remote control with software - automatic mains phase detection - separated power supply for digital and analog section - fully DC coupled, no condenser in signal path - By-Pass mode (e.g. for integration to a home cinema system) - Audionet Link output to remote control Audionet devices - Switchable headphone output
Options	<ul style="list-style-type: none"> - Phono card for MM- und MC-pick up - External power supply Audionet EPS G2 or Audionet EPX

Audionet

audionet GmbH

Brunsbütteler Damm 140 B

13581 Berlin, Germany

www.audionet.de

kontakt@audionet.de

Errors and omissions excepted. Specifications and design are subject to changes without prior notice.